



4. Remove the left brake hose guide (7) by removing the bolt (8).
5. Remove the left caliper assembly (9) from the fork leg by removing the fixing bolts (10).
6. Remove the front axle holder nuts (11) and the front axle holder (12).
7. Unscrew the axle (13). Remove the wheel.

**NOTE:**

\* Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

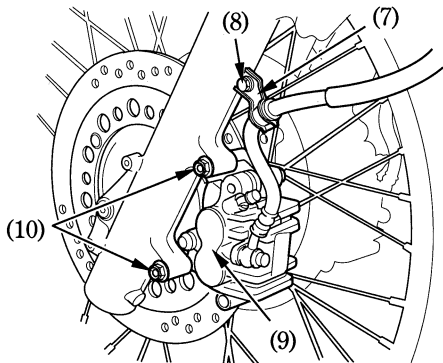

(7) Brake hose guide    (9) Left caliper assembly  
 (8) Bolt                    (10) Fixing bolts

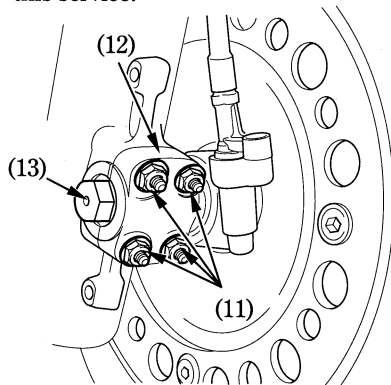

(11) Holder nuts                    (13) Axle  
 (12) Axle holder