



▲WARNING

- * **KEEP OUT OF REACH OF CHILDREN.**
- * **Even though the battery is sealed, it still vents explosive gases. Do not allow open flames or sparks near the battery.**

Battery Removal

The battery (1) is in the battery box below the seat.

1. Remove the seat (page 34).
2. Remove the left and right side covers (page 44).
3. Remove the tool kit and document bag.
4. Remove the battery cover (2) by removing the bolt (3) and remove the strap (4).
5. Disconnect the negative (-) terminal lead (5) from the battery first, then disconnect the positive (+) terminal lead (6).
6. Pull the terminal leads out from the battery box.
7. Pull out the battery from the battery box.

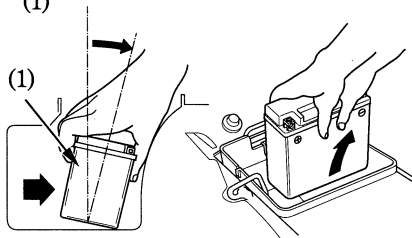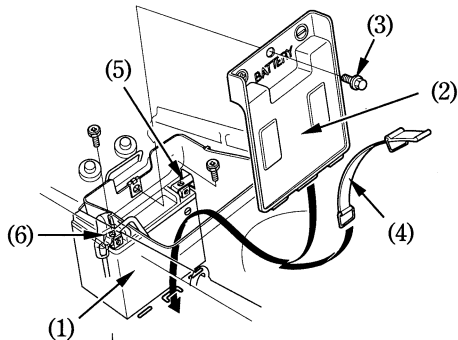

- | | |
|-------------------|--------------------------------|
| (1) Battery | (4) Strap |
| (2) Battery cover | (5) Negative (-) terminal lead |
| (3) Bolt | (6) Positive (+) terminal lead |