

Tank fuel cock

Position of the level shows the fuel cock status.

ON – The gasoline will flow into the carburetor. When starting the engine, place in this position.

OFF – The fuel will not flow to the carburetor. Place in this position when storing vehicle for long periods of time, or when inspecting or servicing the vehicle, .

RES – This position draws fuel from the reserve tank. Place in this position when the gasoline has fully run out in the “ON” position. Refuel as soon as possible. After refueling, return to the 'ON' position. Leaving in the RES position will consume the fuel in the reserve tank, leaving no reserve if fuel runs out. (Reserve tank capacity: Approximately 1.0 L)

