

Correct operation

Riding

- Check to see that the kick starter pedal and the sidestand are housed away properly.
- The gears on this motorcycle should be changed according to the traveling speed. The table on the right indicates the speed range each gear is smoothly capable of traveling in.
- Avoiding unnecessary acceleration is the key to saving fuel and prolonging the useful life of this motorcycle.

NOTICE

-Immediately request an inspection by a Honda dealer if any abnormal sounds can be heard from the engine.

NOTICE

-Immediately request an inspection by a Honda dealer if any abnormal sounds can be heard from the engine.

	Speed range
1 st gear	0~20 km/h
2 nd gear	5~30 km/h
3 rd gear	10~45 km/h
4 th gear	Over 20km/hr

< Running in >

Avoid aggressive starting and acceleration during the first 500kms of riding, and ride well below the speed range indicated above. Properly running in the engine will prolong the useful life of this motorcycle.

NOTICE

- Start the vehicle in a courteous manner.
- Ride within the speed limit.