

## Easy maintenance

### Checking for abnormal wear


Check for any signs of wear where the tires strike the ground.

Have your HONDA dealer check for any imbalances if you find any abnormal wear.



### < Tread depth >

Use the wear indicator mark to inspect the remaining tread on a tire. Replace the tires immediately when the wear indicator mark appears.

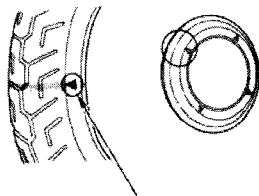

Wear indicator