

Easy maintenance

Engine oil

The oil in the engine must be checked regularly and topped up as required in order to maintain the motorcycle to its optimum condition. Any oil that is dirty or old will have an adverse effect on the engine and therefore should be replaced.

The exhaust pipes and engine unit are hot after running. Take care to avoid burns when inspecting or maintaining the motorcycle directly after running.

< Oil level inspection >

1. Leave the engine to idle for 3~5 minutes on a flat parking surface, then stop the engine.
2. Remove the oil level gauge after standing the motorcycle for 2-3 minutes.

3. Wipe any excess oil from the oil level gauge.
4. Stand the motorcycle upright and reinsert the oil level gauge without screwing it in fully.
5. Make sure that the oil level is between the upper and lower mark on the oil level gauge. Top up oil if necessary (Refer to the next page) and re-check.
6. Screw in the oil level gauge correctly and securely.

