

## Easy maintenance

### **Adjusting the clutch lever play**

Adjust the clutch lever play with the adjusters located on the clutch cable.

- Loosen the locknut and turn the adjuster.
- Tighten the locknut after adjustment.

After adjustment, pull in the clutch lever until resistance can be felt. Measure the play and confirm that the play is within the specified range using a ruler.

Also inspect for smooth gear changes and ensure that the engine does not stall or cause the motorcycle to engage abruptly after the adjustment.

