

Easy maintenance

<Cleaning the air cleaner element>

Do not use extremely flammable substances to clean the air cleaner element.

1. Remove the air cleaner element.
2. Clean the air cleaner element in clean oil based cleaner. Ring out the air cleaner element and then dry it.
3. Apply clean oil to the air cleaner element, ring out the excess and then reinstall.

Oil: Gear oil (#80~#90)

