

- (1) PAD PIN
- (2) PAD SPRING PIN
- (3) BOLTS
- (4) DISC COVER
- (5) CALIPER

### Brake pad replacement


Clean the brake disc with a high quality degreasing agent if they are contaminated with oil or grease. Replace the pads if they are contaminated.

#### Front Brake Pad Replacement (ED / 3E)

Loosen the pad pins.  
 Remove the spring pin from the pads.  
 Remove the brake caliper mounting bolts, disc cover, flange collars and caliper.



ED / 3E

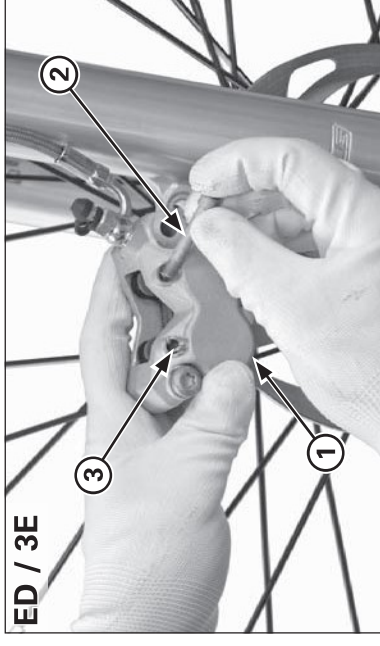

ED / 3E

- (1) NEW PADS
- (2) PAD PIN
- (3) PAD SPRING PIN

Install the new pads and secure with the pin and the spring pin for the pads.

Install the caliper to the fork so the disc is positioned between the pads, being careful not to damage the pads. Apply a locking agent to the caliper mounting bolt threads. Install the disc cover, then install and tighten the mounting bolts.

**Torque: 26 N·m (2.7 kgf·m, 20 lbf·ft)**

Operate the brake lever to seat the caliper pistons against the pads.



ED / 3E

Push the pistons all the way in to allow installation of new brake pads.  
 Check the brake fluid level in the reservoir as this operation causes the level to rise.

Remove the pad pins and brake pad.

Clean the brake caliper inside especially around the caliper pistons.