

ED / 2E

- (1) BOLT
- (2) SPEED SENSOR
- (3) SPEED SENSOR BRACKET

Rear Brake Pad Replacement (ED / 2E)

NOTICE

*Before replacing the rear brake pads, remove the speed sensor.
The speed sensor may be damaged if struck or pulled.*


Speed sensor removal

- Remove the following:
- Speed sensor bolt
 - Remove the sensor from the sensor mount.

Detach the speed sensor from the rear brake calliper for easier removal.




ED / 2E

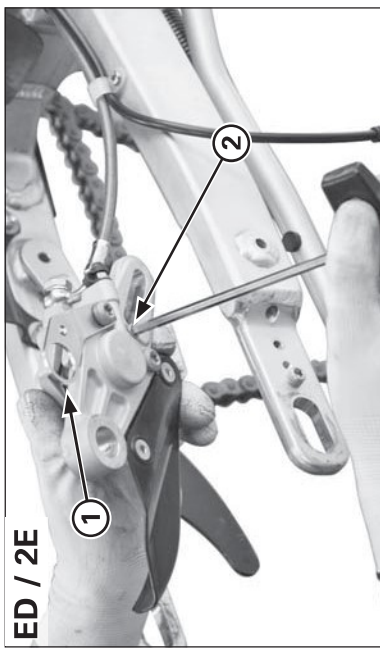

ED / 2E

- (1) BRAKE PADS
- (2) PAD PIN

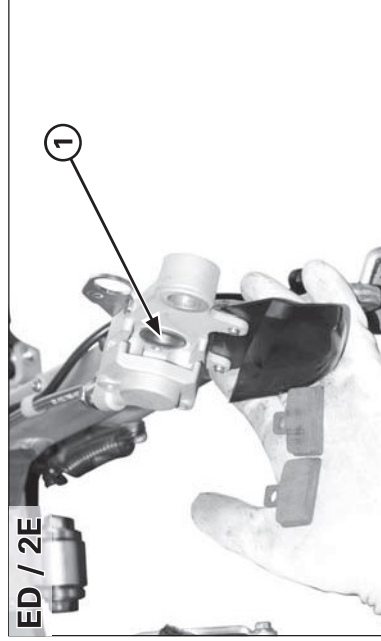


ED / 2E

ED / 2E

- (1) CALIPER PISTON

Remove the rear wheel (page 5-15)
Push the piston all the way in to allow installation of new brake pads.
Check the brake fluid level in the reservoir as this operation causes the level to rise.
Remove the pad pin and brake pads.
Clean the brake caliper inside especially around the caliper pistons.

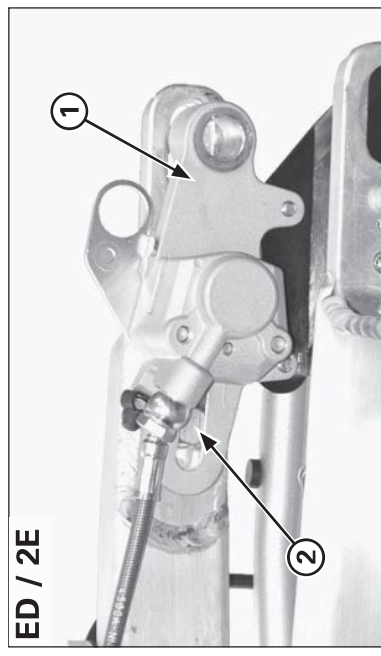

ED / 2E

- (1) CALIPER BRACKET
- (2) BOSS/SLIT

Install the new pads and secure them with the pad pin.
Install the brake caliper bracket aligning its slit with the boss on the swingarm.

Install the rear wheel (page 5-16).
Operate the brake pedal to seat the caliper pistons against the pads.