



Disassembly/Assembly

NOTICE

- *Keep the master cylinder piston, cups, spring and snap ring as a set; don't substitute individual parts.*
- *When installing the cups, do not allow the lips to turn inside out and be certain the snap ring is firmly seating in the groove.*

Remove the snap ring and disassemble the master cylinder.

Inspection

Check the following items (specifications; page 2-4):

- Master cylinder and piston for scoring, scratches or other damage
- Master piston O.D. and master cylinder I.D.

Installation

Installation is in the reverse order of removal.

Torque:
 Clutch hose oil bolt: 12 N·m (1.2 kgf·m, 8.8 lbf·ft)
 Master cylinder holder bolt: 3.2 N·m (0.33 kgf·m, 2.4 lbf·ft)