

Contents

1. Operating instructions

Operation component locations	1-1
Fuel	1-2
Coolant	1-2
Basic Operation	1-2
Odometer/Speedometer (ED/2ED)	1-4
Steering lock	1-5
Shifting gears	1-5
Braking	1-6
Parking	1-6
Controls	1-7

2. Service data

Specifications	2-1
Service data	2-2
Torque Values	2-6
Tools	2-8
Special	2-8
Lubrication & Seal Points	2-9
Cable & Harness Routing	2-12

3. Service and maintenance

Maintenance schedule	3-1
Pre-ride Inspection	3-1
Warming-up Inspection	3-2
Ride Inspection	3-2
After Ride Inspection	3-2
Replacement Parts	3-2
Fuel Line	3-3
Air Cleaner	3-3
Spark Plug	3-4
Valve Clearance	3-4
Engine Oil/Oil Filter	3-6
Engine Idle Speed	3-8
Transmission Oil	3-8
Coolant	3-9
Clutch System	3-10
Exhaust Pipe And Muffler	3-10
Drive Chain	3-11
Drive Chain Slider	3-11
Drive/Driven Sprockets	3-12
Brake Fluid	3-13
Brake Pad Wear	3-14

Brake System	3-14
Handlebar And Steering Head Bearings	3-15
Wheels And Tires	3-15
Front Suspension	3-16
Fork (ED/3ED)	3-16
Fork (2ED/4ED)	3-17
Rear Suspension	3-18
Front headlight and front and rear position light	3-19
Cleaning	3-20
Storage	3-20

4. Engine servicing

Oil Pressure Relief Valve	4-1
Oil Pump	4-1
Disassembly / Installation of fuel feed hose	4-4
Fuel Line Inspection	4-5
Fuel Tank/Fuel Pump	4-7
Injector	4-13
Throttle Body	4-13
Water Seal And Bearing Replacement	4-15
Radiator Removal/Installation	4-17
Engine Removal/Installation	4-18
Cylinder Compression	4-20
Cylinder Head Removal	4-23
Cylinder Head Disassembly	4-25
Cylinder Head Inspection	4-26
Valve Guide Replacement	4-27
Valve Seat Inspection/Refacing	4-28
Cylinder Head Assembly	4-31
Cylinder/Piston	4-32
Cylinder Head Installation	4-37
Camshaft/Cylinder Head Cover Installation	4-38
Right Crankcase Cover	4-40
Clutch Slave Cylinder	4-41
Clutch	4-43
Kickstarter	4-46
Gearshift Linkage	4-47
Left Crankcase Cover	4-49
Flywheel	4-52
Crankcase Separation/Disassembly	4-54
Crankshaft/Transmission Inspection	4-56
Crankcase Bearing Replacement	4-56
Transmission Assembly	4-58
Crankcase Combination	4-59

5. Frame servicing

Front Wheel	5-1
Fork	5-3
Steering stem	5-12
Rear Wheel	5-15
Shock Absorber	5-16
Shock Linkage	5-20
Swingarm	5-21
Brake pad replacement	5-25
Front brake caliper	5-28
Rear brake caliper	5-29
Front master cylinder	5-30
Rear master cylinder	5-31
Brake pedal	5-31
Clutch master cylinder	5-32

6. Electrical servicing

Charging system inspection	6-1
Ignition system inspection	6-3
PGM-FI System inspection	6-5
PGM-FI Self-diagnosis malfunction indicator lamp (MIL) failure codes	6-8
Bank angle sensor inspection	6-9
Engine stop switch inspection	6-10
Cooling fan system inspection	6-10
Chapter lights / instruments / switches (ED/2ED)	6-11
Indicator light/Indicator light relay	6-12
Speed sensor	6-15
Wiring diagram (ED/2ED)	6-17
Wiring diagram (3ED/4ED)	6-18