



## Frame servicing

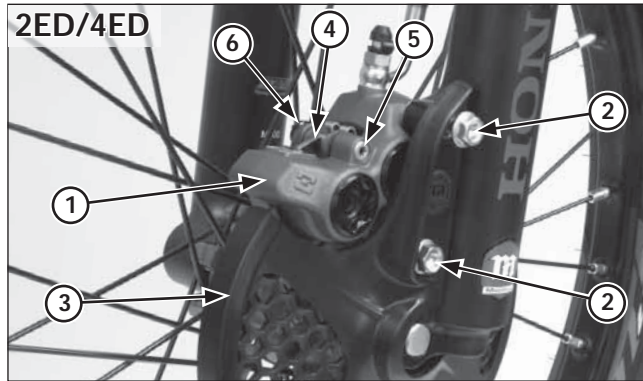

- (1) CALIPER
- (2) BOLTS
- (3) DISC COVER
- (4) PAD SPRING
- (5) PIN
- (6) CIRCLIP

### Front Brake Pad Replacement (2ED/4ED)


Remove the brake caliper mounting bolts, disc cover, flange collars and caliper.  
Remove the circlip.  
Remove the pad pin.  
Remove the spring from the pads.

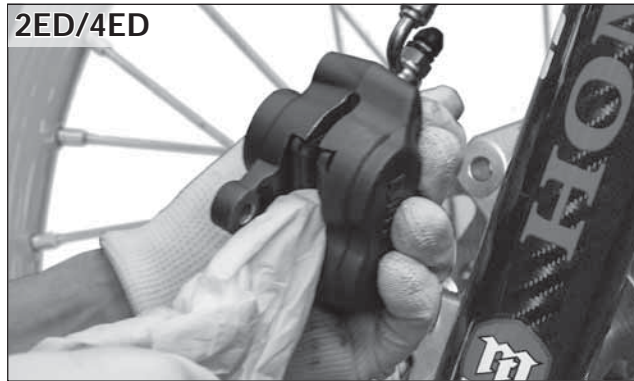

Push the pistons all the way in to allow installation of new brake pads.  
Check the brake fluid level in the reservoir as this operation causes the level to rise.

Remove the pad pin and brake pad.

Clean the brake caliper inside especially around the caliper pistons.

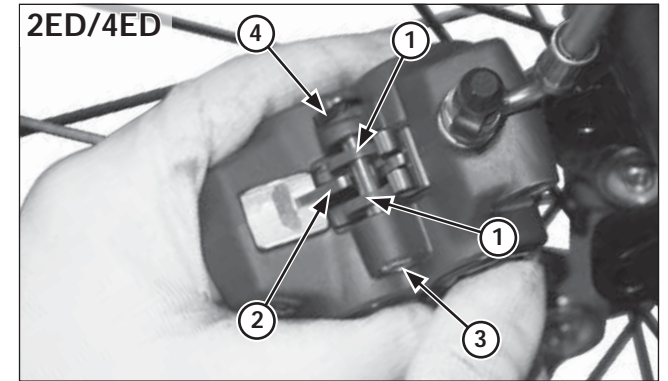

- (1) NEW PADS
- (2) PAD SPRING
- (3) PIN
- (4) CIRCLIP

Install the new pads, the pad spring and secure with the pin and the circlip.

**Torque: 8 N•m (0.8 kgf•m, 5.9 lbf•ft)**

Install the caliper to the fork so the disc is positioned between the pads, being careful not to damage the pads. Apply a locking agent to the caliper mounting bolt threads. Install the disc cover, then install and tighten the mounting bolts.

**Torque: 26 N•m (2.7 kgf•m, 20 lbf•ft)**

Operate the brake lever to seat the caliper pistons against the pads.