


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

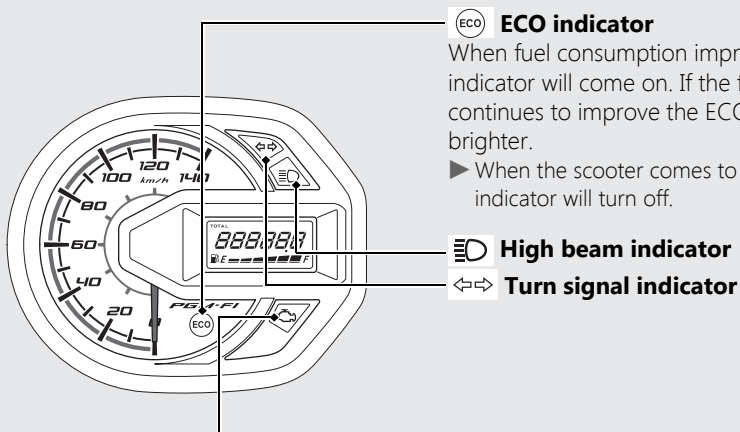

ECO indicator

When fuel consumption improves the ECO indicator will come on. If the fuel consumption continues to improve the ECO indicator will be brighter.


▶ When the scooter comes to a stop, the ECO indicator will turn off.

High beam indicator

Turn signal indicator

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned **I** (On).

If it comes on while engine is running:  **P. 80**