

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 94	Engine Does Not Start Even If the Throttle is Opened .....	P. 103
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 95	<b>When the Honda SMART Key System Does Not Operate Properly</b> .....	P. 104
<b>Warning Indicators On or Flashing</b> .....	P. 96	<b>Unlock the Seat in an Emergency</b> .....	P. 106
PGM-FI (Programmed Fuel Injection)		<b>Unlock the Ignition Switch in an Emergency</b> .....	P. 107
Malfunction Indicator Lamp (MIL) .....	P. 96	<b>Tyre Puncture</b> .....	P. 110
Battery Charging Condition indicator .....	P. 96	<b>Electrical Trouble</b> .....	P. 111
ABS (Anti-lock Brake System) Indicator .....	P. 97	Battery Goes Dead .....	P. 111
Honda SMART Key Indicator .....	P. 98	Burned-out Light Bulb .....	P. 111
<b>Other Warning Indications</b> .....	P. 100	Blown Fuse .....	P. 112
Fuel Gauge Failure Indication.....	P. 100	<b>Unstable Engine Operation Occurs Intermittently</b> .....	P. 113
<b>When the Idling Stop System Does Not Operate Properly</b> .....	P. 101		
Idling Stop Indicator Does Not Come On ..	P. 101		
Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On.....	P. 102		