

4. FUEL SYSTEM

SERVICE INFORMATION	4-1
TROUBLESHOOTING	4-2
FUEL TANK	4-3
AIR CLEANER CASE	4-4
CRANKCASE BREATHER	4-5
THROTTLE VALVE DISASSEMBLY	4-6
CARBURETOR REMOVAL	4-7
FLOAT, FLOAT VALVE AND JETS	4-8
CARBURETOR ASSEMBLY	4-9
FLOAT LEVEL ADJUSTMENT	4-9
CARBURETOR INSTALLATION	4-10
THROTTLE VALVE ASSEMBLY	4-10
PILOT SCREW ADJUSTMENT	4-11
HIGH ALTITUDE ADJUSTMENT	4-11

SERVICE INFORMATION

GENERAL

- Use caution when working with gasoline. Always work in a well ventilated area away from sparks or flames.
- When disassembling fuel system parts, note the locations of the O-rings. Replace them with new O-rings during reassembly.
- The carburetor float bowl has a drain screw that can be loosened to drain gasoline.

SPECIFICATIONS

Fuel tank capacity	'84:	11.5 liter 3.04 US gal, 2.53 Imp. gal)
	After '84:	10.5 liter (2.77 US gal, 2.31 Imp. gal)
Fuel reserve capacity		1.0 liter (0.26 US gal, 0.22 Imp. gal)
Carburetor		

	'84:	After'84:
Identification mark	PD55A	PD55C
Type	Piston valve	←
Venturi dia.	22 mm (0.9 in)	←
Float level	14 mm (0.55 in)	←
Pilot screw opening	2-1/8 turns out	←
Idle speed	1,400 ± 100 rpm	←
Main jet	#95	←
Throttle lever free play	5-10 mm (3/16-3/8 in)	←
Jet needle	3rd	←

TOOL

Common	
Float level gauge:	07401-0010000