


## AIR CLEANER CASE


Remove the seat, fuel tank and rear fenders (Page 13-1).  
Loosen the air cleaner-to-carburetor connecting tube band.

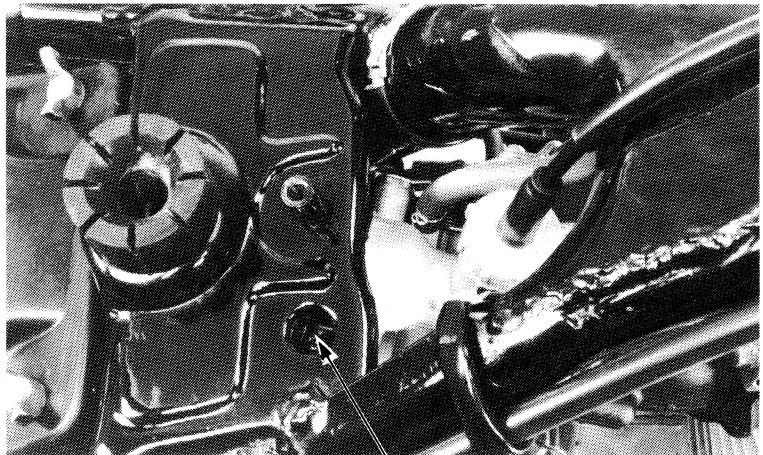

AIR CLEANER-TO-CARBURETOR  
CONNECTING TUBE BAND

Loosen the air cleaner-to-frame connecting tube band.

Remove the two air cleaner mounting bolts and the air cleaner case.

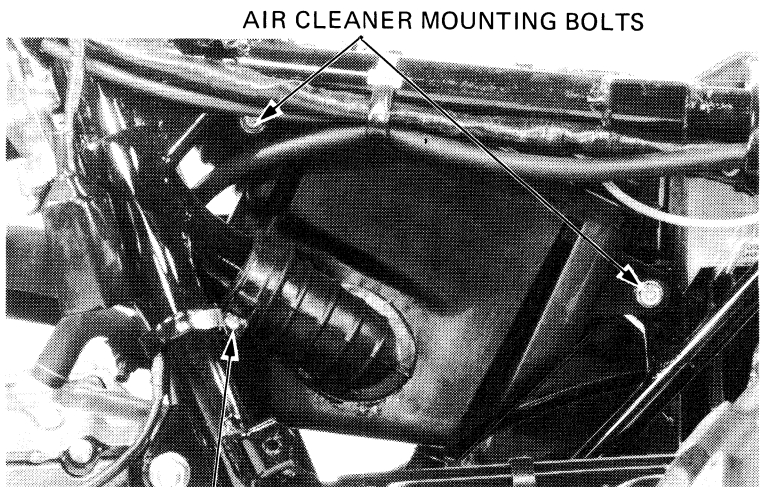

AIR CLEANER MOUNTING BOLTS

AIR CLEANER-TO-FRAME CONNECTING TUBE BAND

