



THROTTLE VALVE DISASSEMBLY

Remove the seat and fuel tank.
Remove the carburetor top from the carburetor by loosening it.

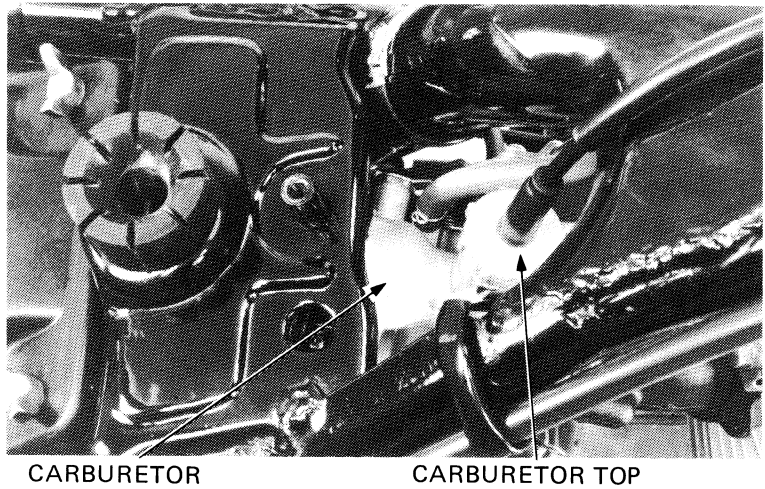

Remove the needle clip retainer, jet needle and needle clip. Inspect the throttle valve and jet needle surfaces for dirt, scratches or wear.

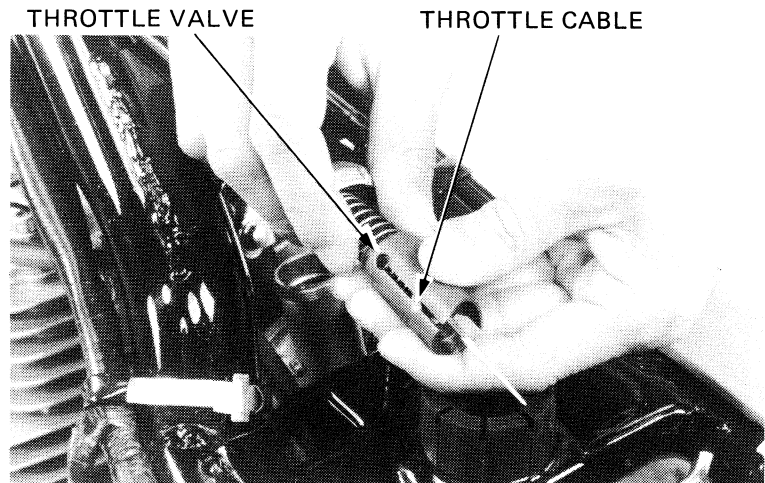

Remove the needle clip retainer, jet needle and needle clip. Inspect the throttle valve and jet needle surfaces for dirt, scratches or wear.

