



CYLINDER HEAD/VALVES

Remove the timing mark hole cap.
Turn the crankshaft with the recoil starter until the cam sprocket "O" mark and cylinder head index mark align.

Remove the cam sprocket bolts and cam sprocket.

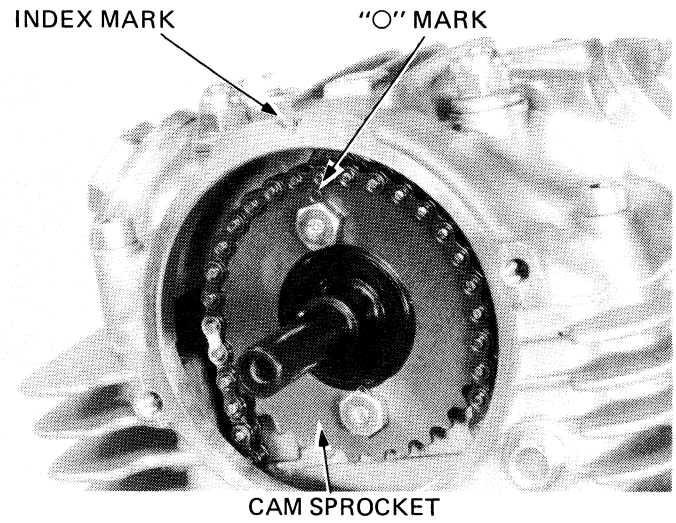

Remove the camshaft.
Suspend the cam chain with a piece of wire to prevent it from falling into the crankcase.

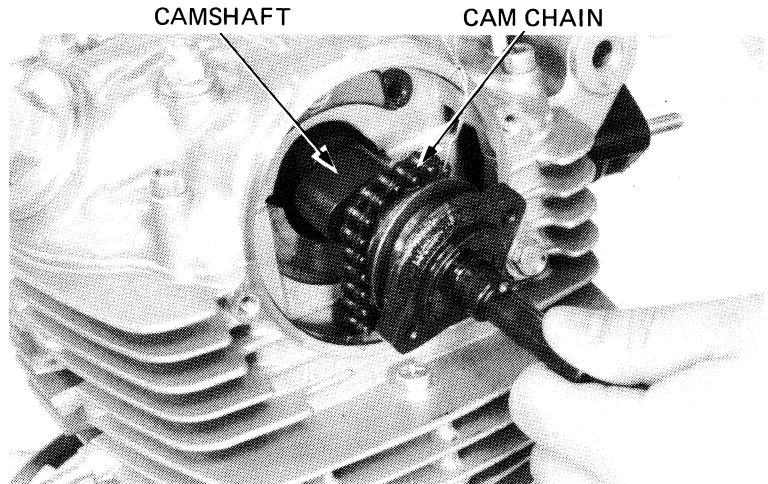

CAMSHAFT INSPECTION

Measure the camshaft O.D. of the bushing and bearing surfaces with a micrometer.

SERVICE LIMITS:

- R: 19.90 mm (0.783 in)
- L: 33.90 mm (1.335 in)

