

CENTRIFUGAL CLUTCH

REMOVAL

Remove the recoil starter from the left crankcase cover (Page 9-2).

Hold the recoil starter driven pulley with a screwdriver or suitable lever.




Remove the right crankcase cover (Page 8-3).

Remove the oil filter rotor cover, slide friction, spring, thrust washer and O-ring.

CAUTION

Be careful not to damage the oil pressure pad.

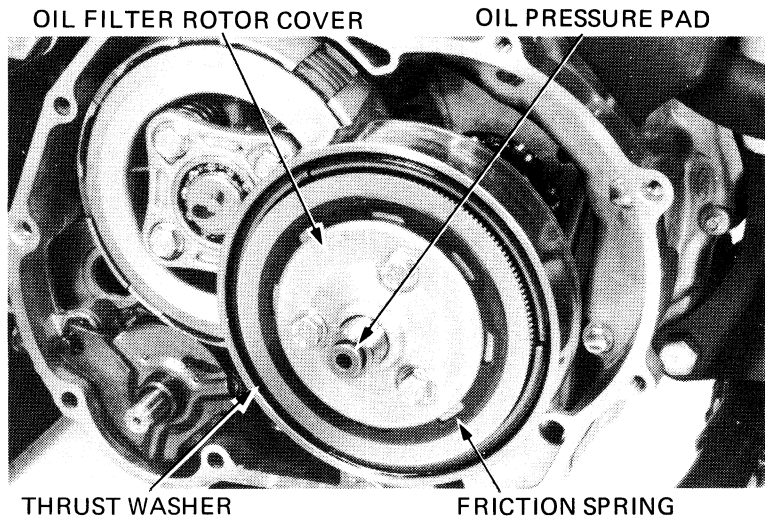

Remove the lock nut by turning it clockwise.

NOTE

The lock nut has left hand threads.

Remove the centrifugal clutch weights.

