


RECOIL STARTER/ALTERNATOR/STARTER CLUTCH

Remove the ratchet, ratchet guide, spring seat and spring.


Check the ratchet, ratchet guide and spring for wear or damage.

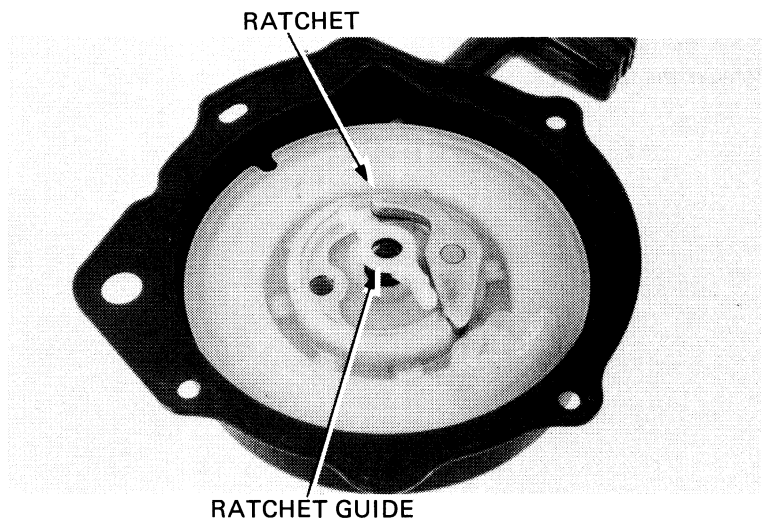

Remove the starter handle cover.
Untie the starter rope and remove the starter handle.
Release the starter rope slowly.
Remove the starter drive pulley.

CAUTION

Wear eye protection and use care when removing the drive pulley and starter spring. The spring can pop out of the housing if care is not used.

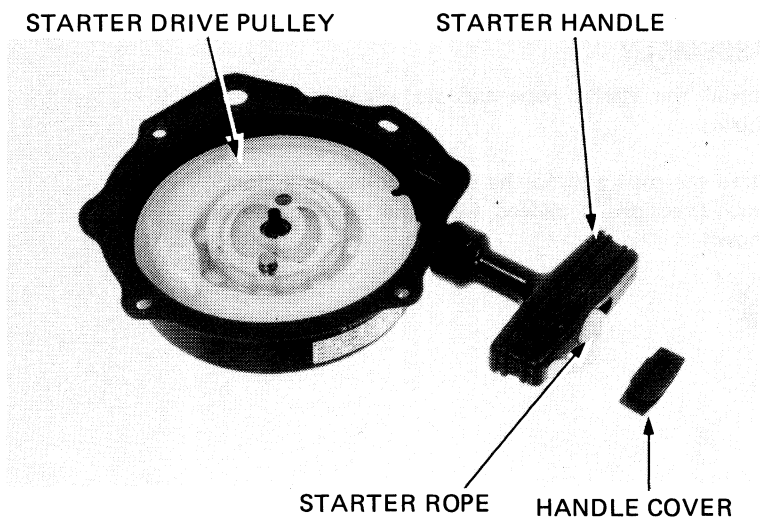

Remove the starter rope from the drive pulley.
Check the starter rope for wear or damage.

