


---


## RECOIL STARTER/ALTERNATOR/STARTER CLUTCH

### LEFT CRANKCASE COVER INSTALLATION

Install the two dowel pins and new gasket.

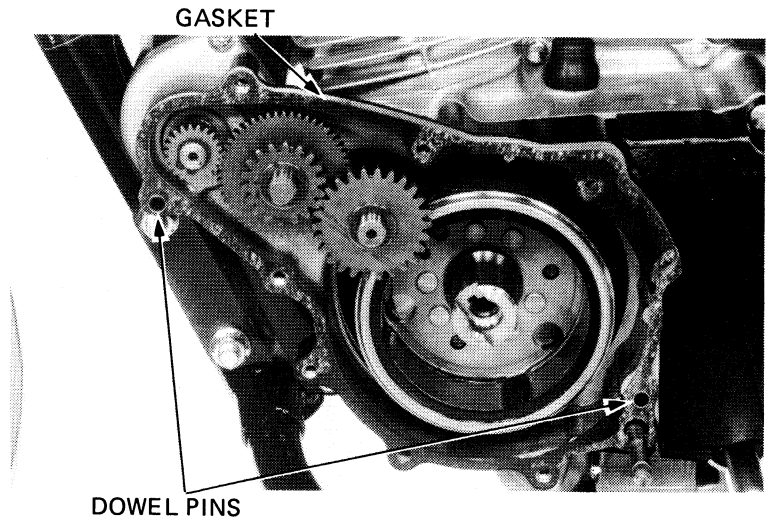

Install the left crankcase cover using the six bolts.

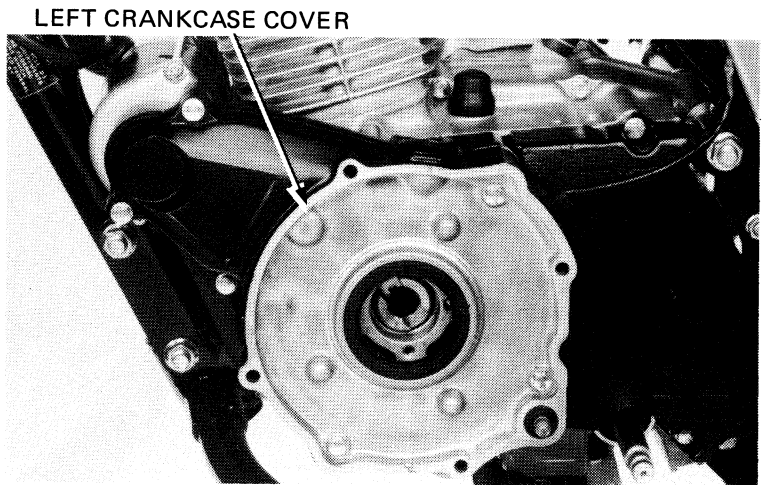

Connect the alternator coupler to the wire harness.

