


FRONT WHEEL/SUSPENSION/BRAKE/ STEERING

Tighten the throttle lever using the bolt and new lock washer.
Bend up the lock washer tab against the bolt head.


Check the lever for smooth operation.

Apply grease to the throttle cable end and connect the cable to the throttle arm.

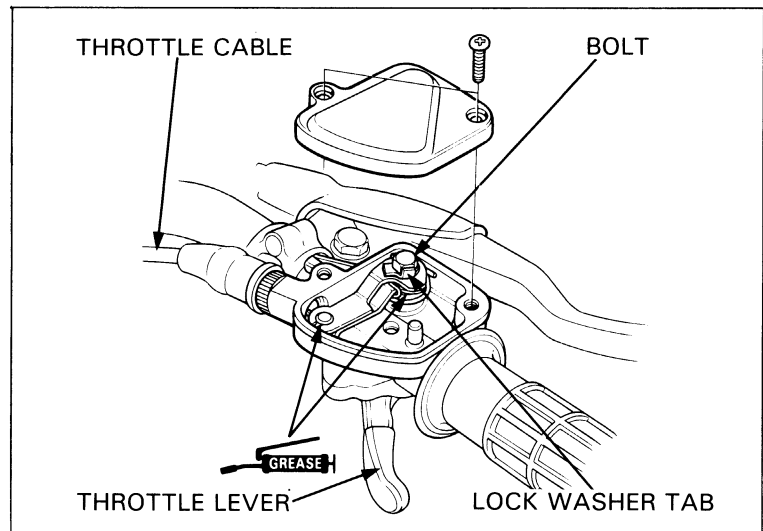

'84:
Install the throttle housing and lever cover onto the handlebar and tighten the forward screw first, then tighten the rear screw.

After '84:
Install the throttle lever cover and screws.

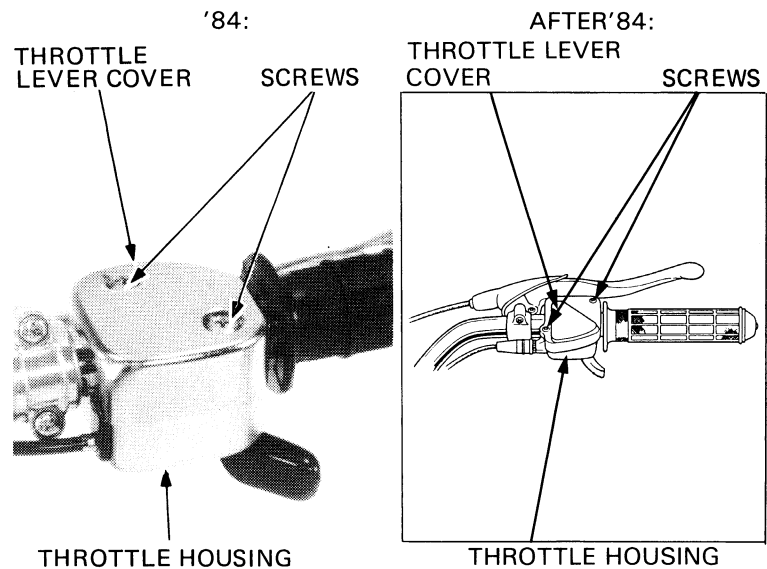

FRONT WHEEL

REMOVAL

Raise the front wheel off the ground by placing a block or work stand under the engine.

Remove the front brake adjusting nut and disconnect the front brake cable.

