


**FRONT WHEEL/SUSPENSION/BRAKE/  
STEERING**

Remove the front wheel hub nuts and hub.

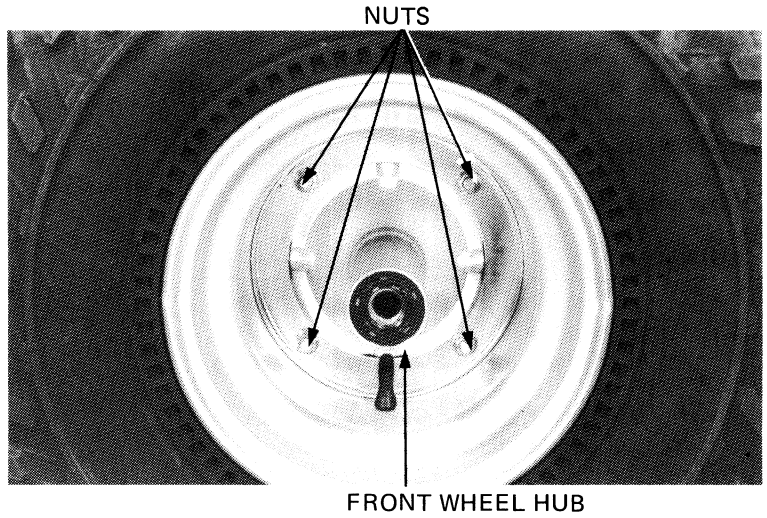

Remove the dust seals.  
Drive out the bearings and remove the center collar.

