



FRONT WHEEL/SUSPENSION/BRAKE/STEERING

Install the dust seal.

Install the wear indicator plate onto the brake cam by aligning the indicator tab with the cut-out in the brake cam.

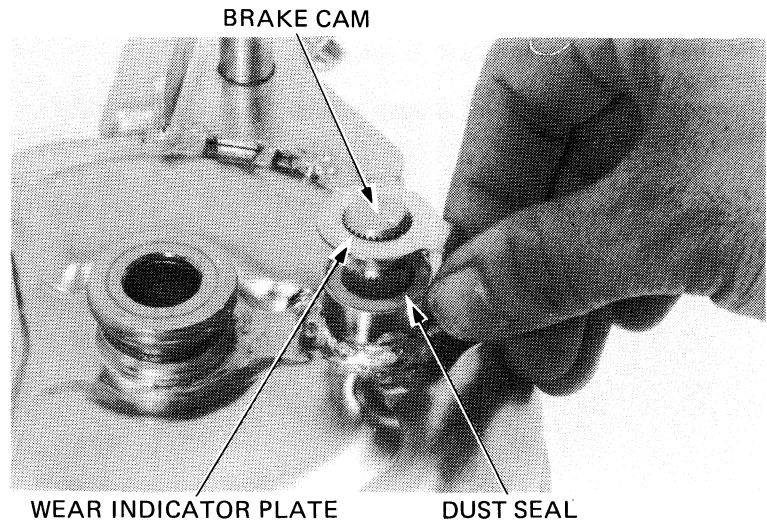

Install the brake arm aligning the punch marks. Torque the brake arm bolt.

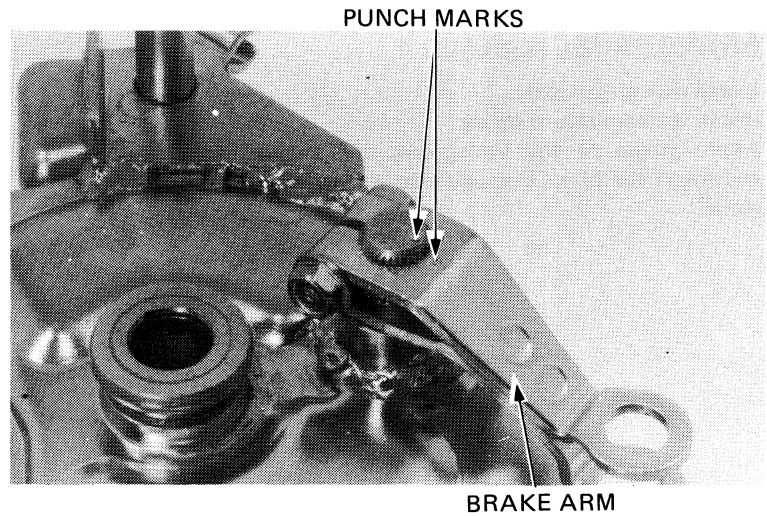

Install the brake shoes and springs onto the brake panel.

WARNING

- *A contaminated brake lining reduces stopping power.*
- *Keep grease off the linings. Wipe excess grease off the cam.*

Install the brake panel (Page 11–15).

