

## FRONT WHEEL/SUSPENSION/BRAKE/ STEERING


---

Wipe all oil from the fork springs.

Install spring A, washer and spring B into the fork tube.


Install the fork cap and snap ring.

Install the fork boot.

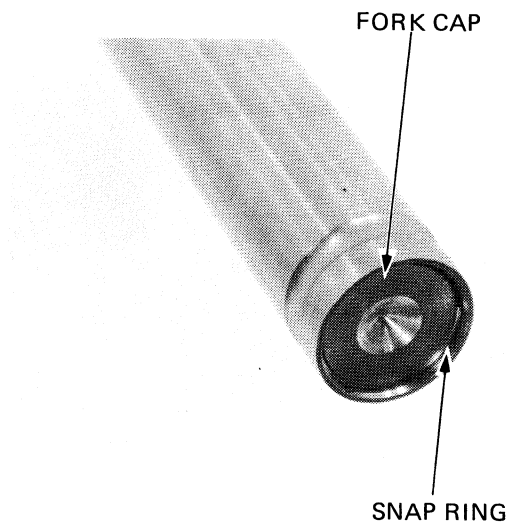

Install the front forks and tighten the fork pinch and setting bolts.

**TORQUE: 40–50 N·m**  
(4.0–5.0 kg-m, 29–36 ft-lb)

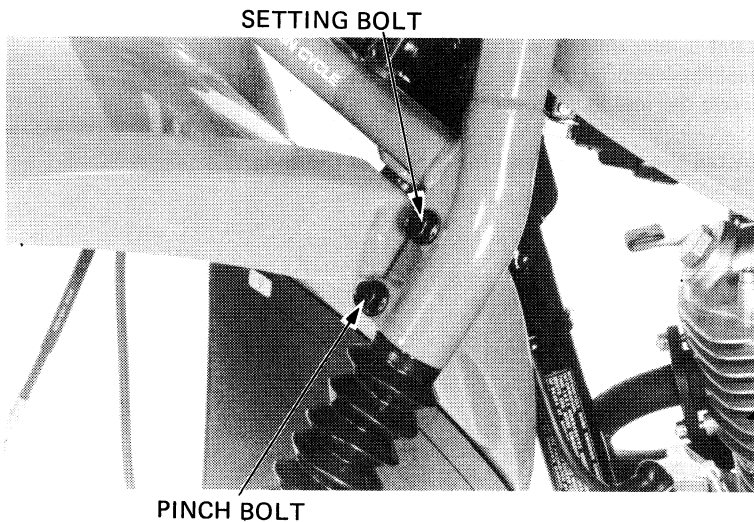

Pull the boot up and tighten the clamp screw.

Install the front wheel (Page 11–16).

