

TROUBLESHOOTING

Wobble or vibration in ATC

1. Bent rim.
2. Loose wheel bearing.
3. Faulty rear axle bearing holder.
4. Faulty tire.
5. Axle not tightened properly.

Poor brake performance

1. Improper brake adjustment.
2. Worn brake shoes.
3. Brake linings oily, greasy or dirty.
4. Worn brake cam.
5. Worn brake drum.
6. Brake arm serrations improperly engaged.
7. Brake shoes worn at cam contact area.