


REAR WHEEL

RIM RUNOUT INSPECTION

Measure the rear wheel rim runout.


SERVICE LIMIT: 4.0 mm (0.16 in)

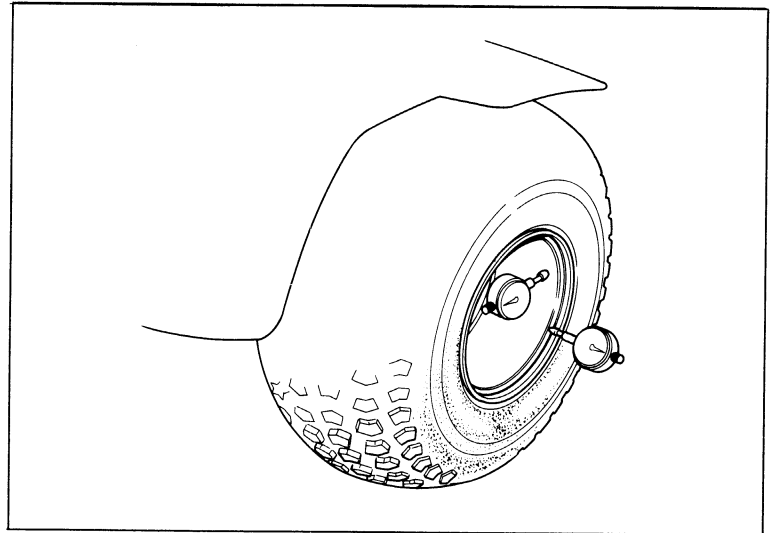

REMOVAL

Raise the rear wheels off the ground with a jack or block under the engine.

Remove the rear wheel hub nuts.
Remove the rear wheels.

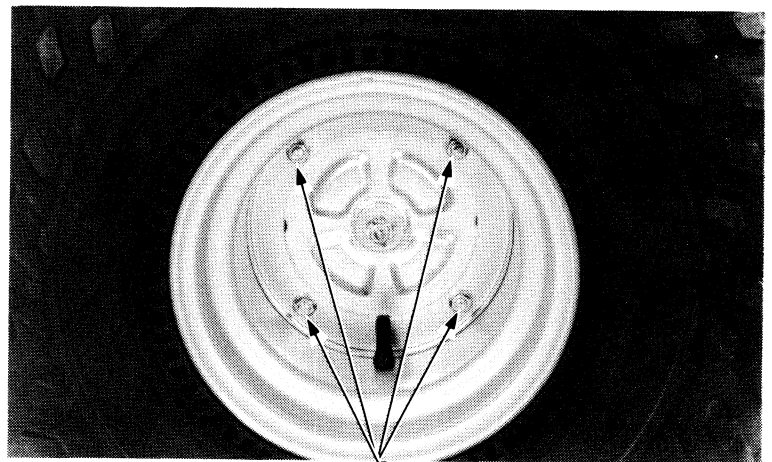

REAR WHEEL HUB NUTS

REAR TIRE DISASSEMBLY/ASSEMBLY

For tire disassembly, assembly and repair, refer to pages 11-10 to 11-13.

NOTE

The rear tire has one rim plate located on the inside rim.

INSTALLATION

Install the rear wheel with the tire valve facing out.

Tighten the hub nuts.

