


## REAR WHEEL/BRAKE/DRIVE MECHANISM

---

Install the rear wheel hubs over the axle.  
Install the lock washers with its "OUTSIDE" mark facing out.

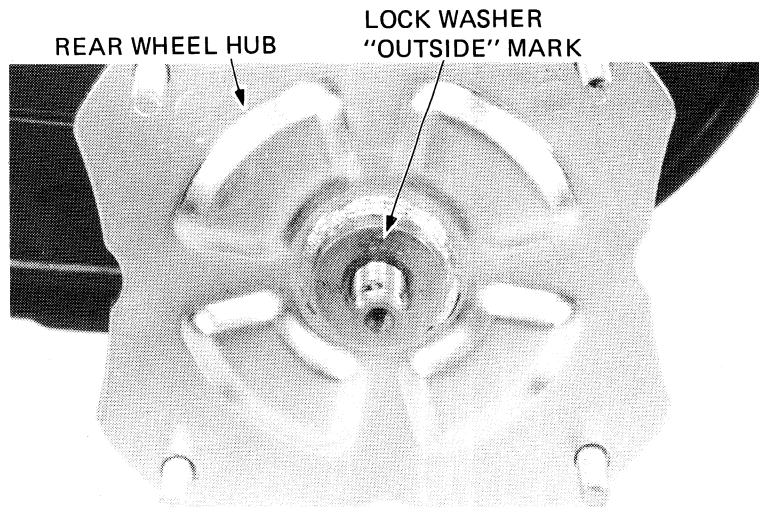

Tighten the rear axle nuts.

**TORQUE: 60–80 N·m**  
**(6.0–8.0 kg·m, 43–58 ft·lb)**

Install new cotter pins and bend the ends.  
Install the rear wheels (Page 12–3).

Adjust the rear brake (Page 3–14).

