

LIGHTS/SWITCHES


NEUTRAL INDICATOR LIGHT

BULB REPLACEMENT

Pull the bulb socket from the neutral indicator light panel.

Replace the bulb with a new one.

Install the bulb socket.

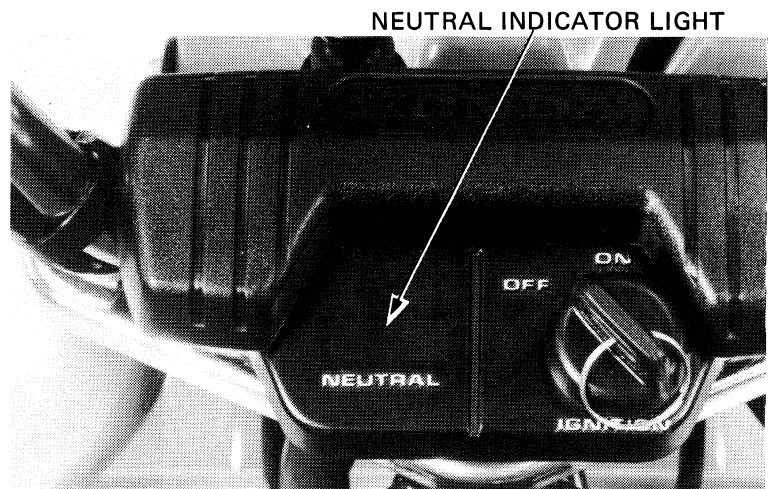


NEUTRAL SWITCH INSPECTION

Disconnect the neutral switch wire connector.

Check the switch for continuity between the switch wire (Light green/red) and ground with the transmission in neutral and with the transmission in any gear.

Replace the neutral switch if necessary (Page 9–10).

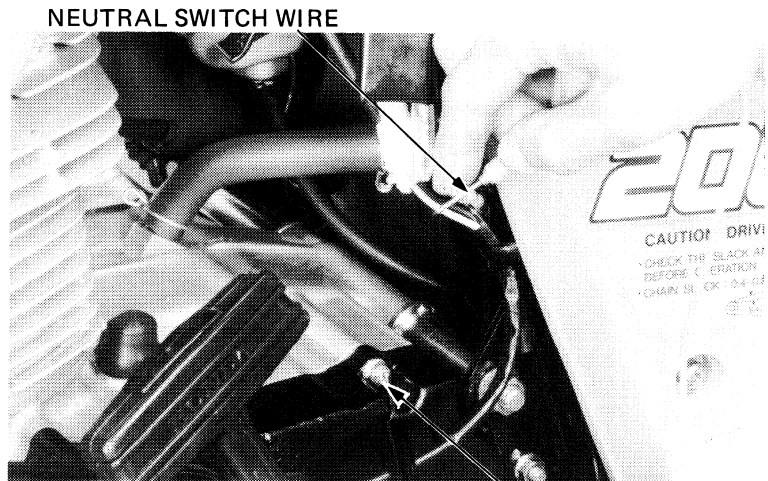

IN NEUTRAL: CONTINUITY
IN ANY GEAR: NO CONTINUITY

GROUND