


AIR CLEANER CLEANING

Remove the seat.
Remove the screws attaching the air cleaner case cover and the cover.



Remove the air cleaner holder and air cleaner element.

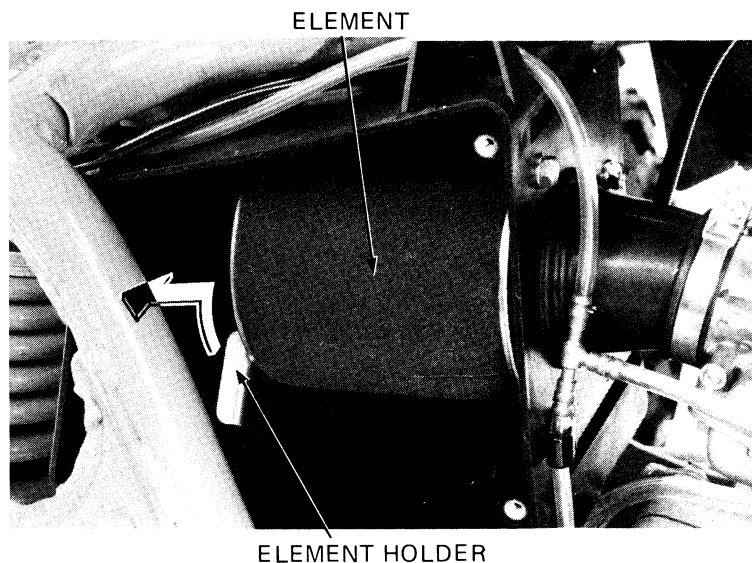

Remove the element from the holder.

NOTE

When reassembling the air cleaner, lightly grease the sealing edge of the holder, as shown.

