



Wash the element in non-flammable or high flash point solvent, squeeze out the solvent thoroughly, and allow to dry.


Soak the element in gear oil (SAE 80–90) and squeeze out excess.

Place the element onto the element holder.

Grease the sealing edge of the holder.

Install the element holder into the air cleaner case.

Install the air cleaner case cover.

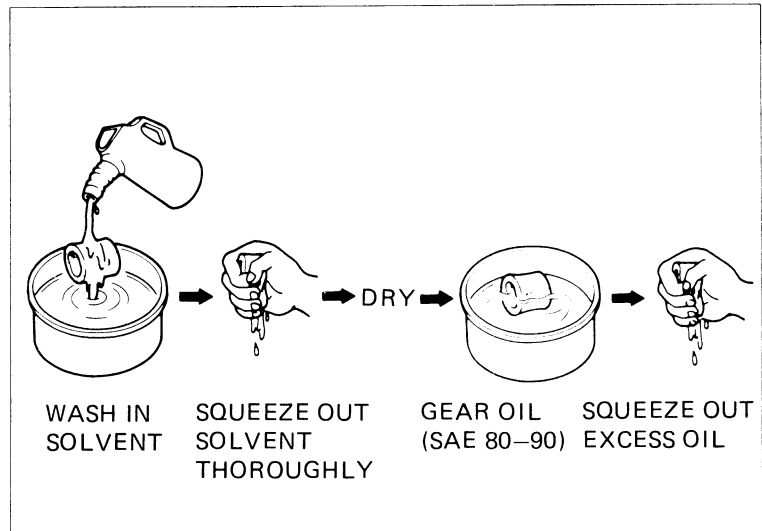

SPARK PLUG

Disconnect the spark plug cap and remove the spark plug.


Visually inspect the spark plug electrodes for wear. The center electrode should have square edges and the side electrode should have a constant thickness. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped. Measure the gap with a wire-type feeler gauge and adjust by carefully bending the side electrode.

SPARK PLUG GAP:

0.7–0.8mm (0.028–0.031 in)

RECOMMENDED REPLACEMENT PLUG:

	NGK	CHAMPION
USA model	B8ES	N-3
Canada model	BR8ES	QN-3

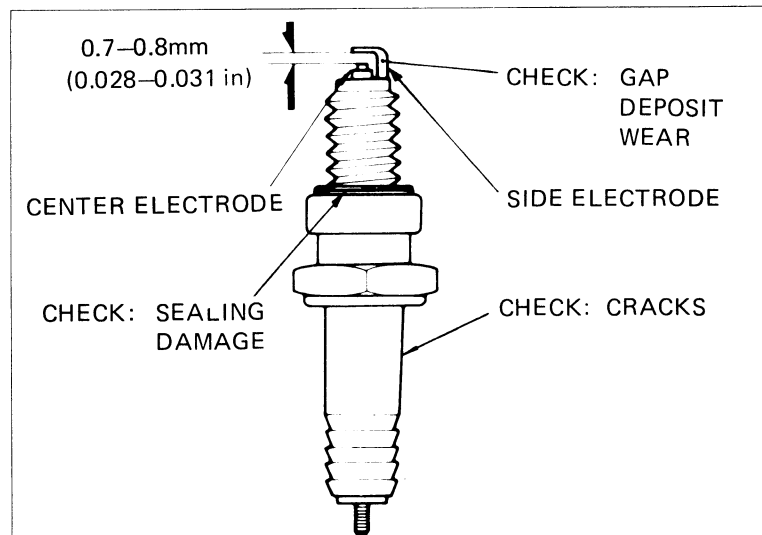

Check the sealing washer and replace with a new one if damaged.

With the sealing washer attached, thread the spark plug in by hand to prevent cross-threading.

Tighten the spark plug to the specified torque.

TORQUE: 12–19 N·m (1.2–1.9 kg·m, 9–14 ft·lb)

Connect the spark plug cap.