


## THROTTLE VALVE DISASSEMBLY

Remove the carburetor top and pull out the throttle valve.


THROTTLE VALVE

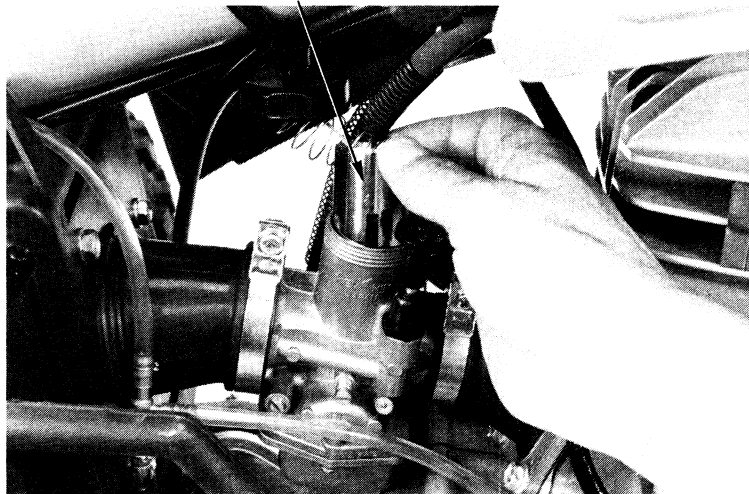

Remove the retainer plate clip. Disconnect the throttle cable from the throttle valve.

RETAINER PLATE CLIP


THROTTLE VALVE

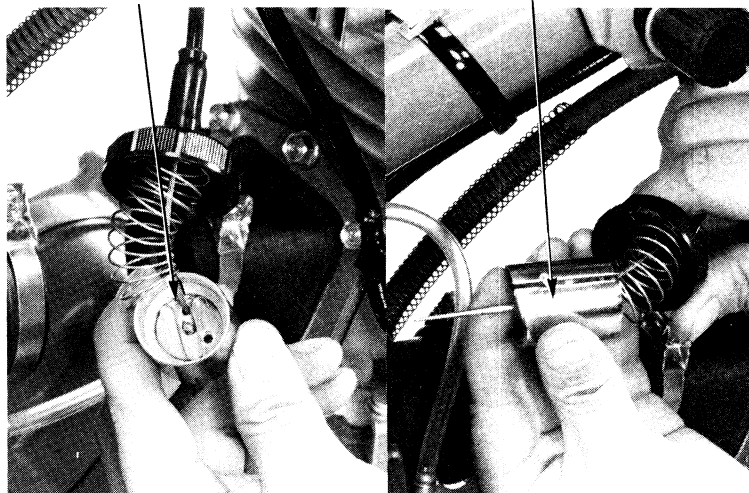

Remove the retainer plate, spring, carburetor top and sealing cap.

SEALING CAP

CARBURETOR TOP

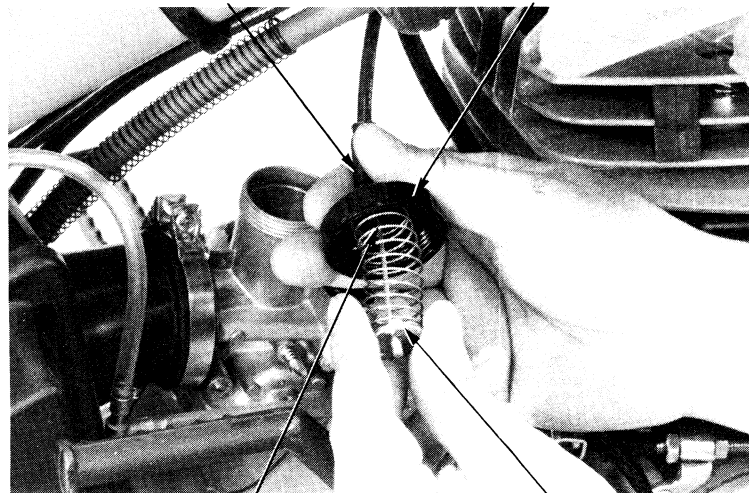

SPRING

RETAINER PLATE