





CARBURETOR REASSEMBLY

Install the needle jet, main jet holder and main jet.
Install the slow jet.
Install the air and stop screws by turning them into their original positions.

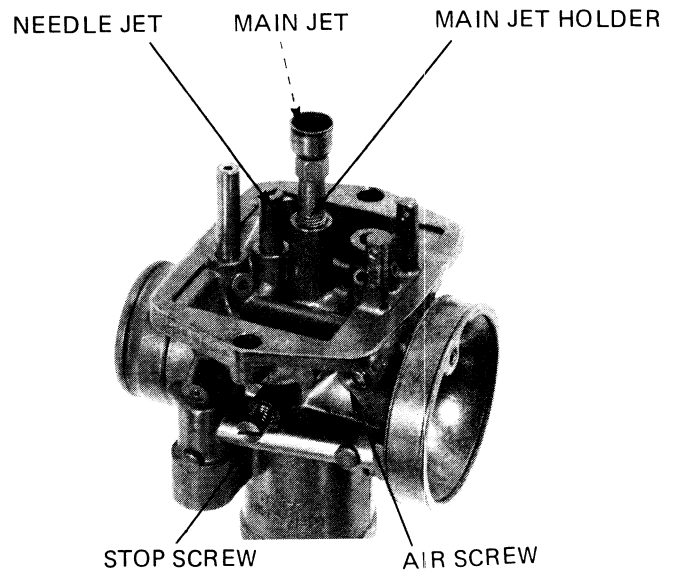

Install the starter valve.
Install the float valve, float and float pin.
Check the float for operation.

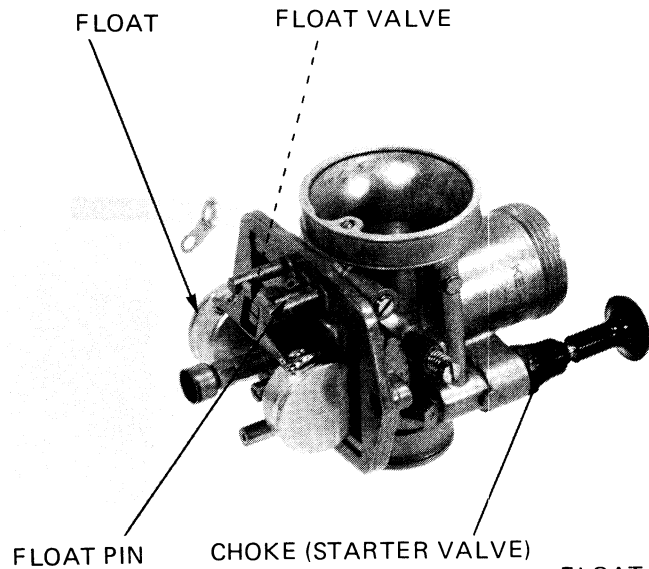

FLOAT LEVEL ADJUSTMENT

Measure the float level at the float chamber mating face as shown by the arrows at the base of float gauge.

FLOAT LEVEL: 18.5 mm (0.7 in)

Install the float chamber.

