


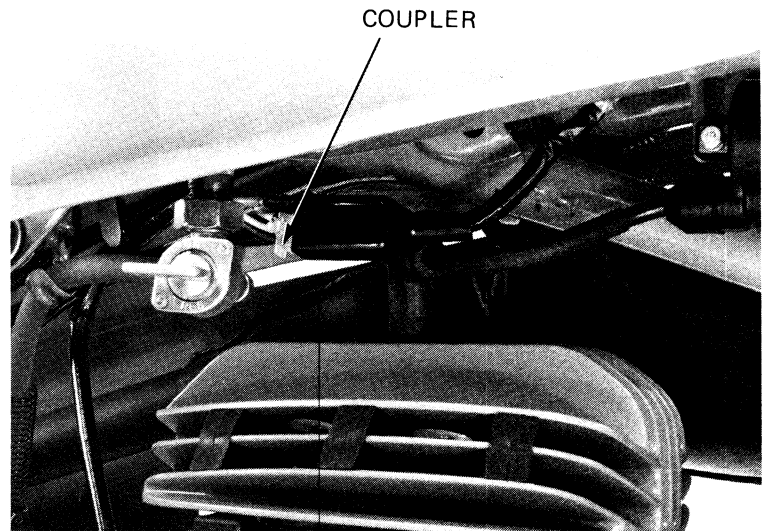

Disconnect the AC generator wire coupler.



Remove the AC generator stator.

CAUTION:

- Do not separate the pulse generator from the stator base.
- Protect the generator assembly to prevent damage to the components.

For AC generator inspection, refer to pages 15-3 and 15-5.

