




CLUTCH

CLUTCH REMOVAL


Remove the gear change pedal.

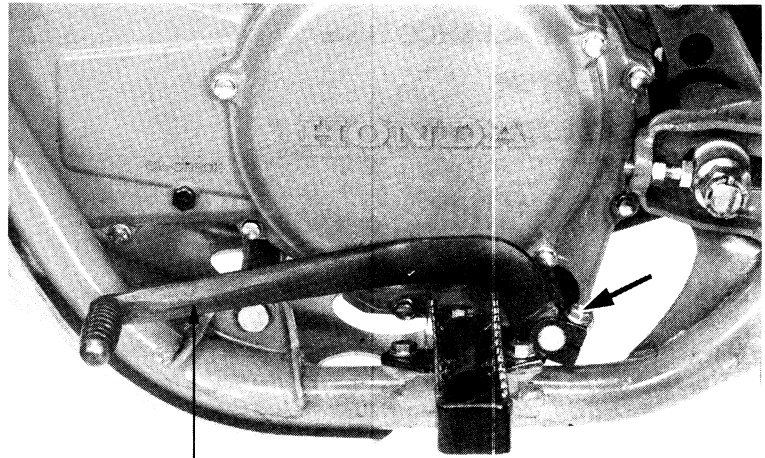

CHANGE PEDAL

Remove the clutch cover.

CLUTCH COVER

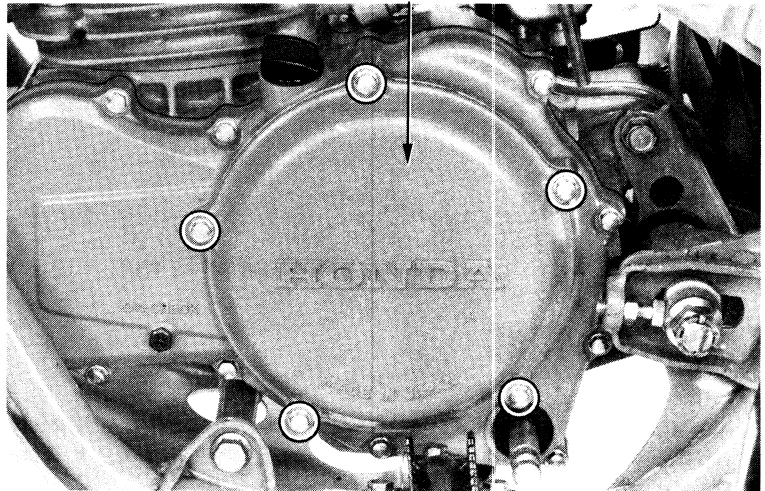

Remove the six clutch bolts and clutch springs.

NOTE

Loosen the bolts in a crisscross pattern in 2-3 steps.

Remove the clutch pressure plate.

