


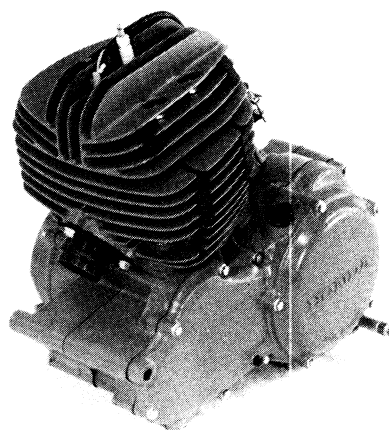

BALANCER GEARS

Remove the left crankcase cover (Page 8-2).
Remove the clutch (Page 7-2).




Hold the primary drive gear by attaching the GEAR HOLDER to the crankcase.

NOTE

Alternate gear holders are commercially available in the USA.

Remove the 10 mm balancer gear special bolt and remove the gear.

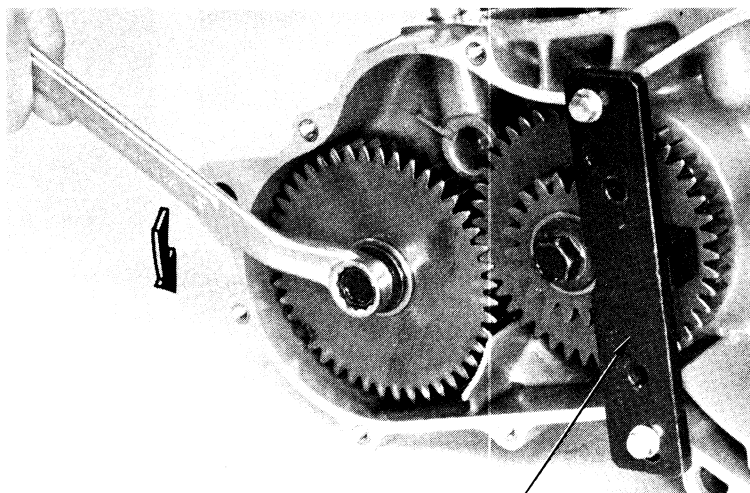

GEAR HOLDER
07924-KA50000 or equivalent

Remove the 10 mm balancer idle gear special bolt and remove the primary drive and balancer idle gears.

