





KICKSTARTER GEAR REMOVAL

Remove the snap ring, kickstarter gear and washer.

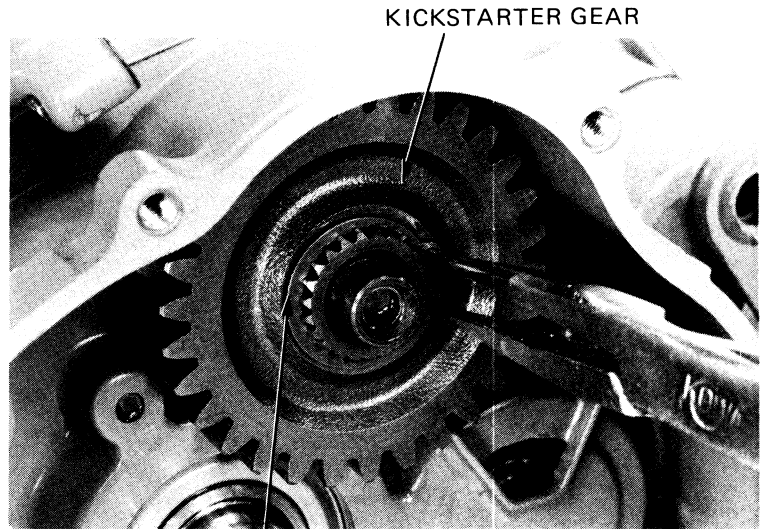

Remove the ratchet idler shaft.

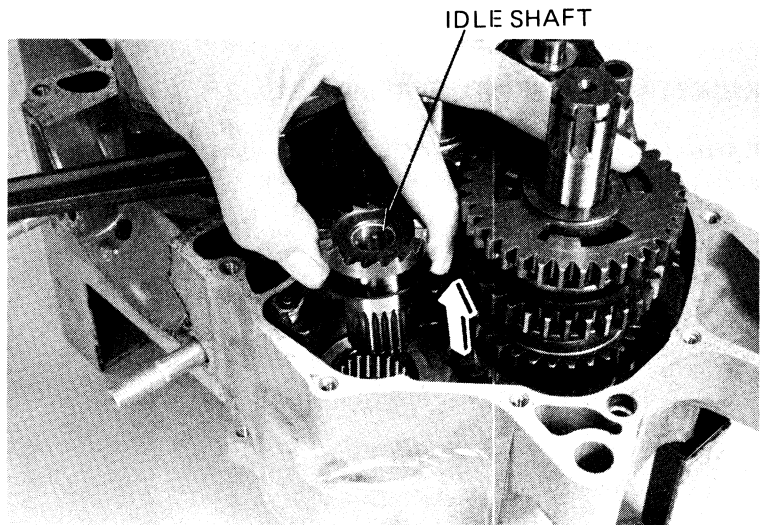

KICKSTARTER INSPECTION

Inspect the kickstarter spindle, drive ratchet, ratchet idler shaft and kickstarter gear for wear or damage.

Inspect the starter return and ratchet springs for fatigue.

