


Install the balancer.

BALANCER

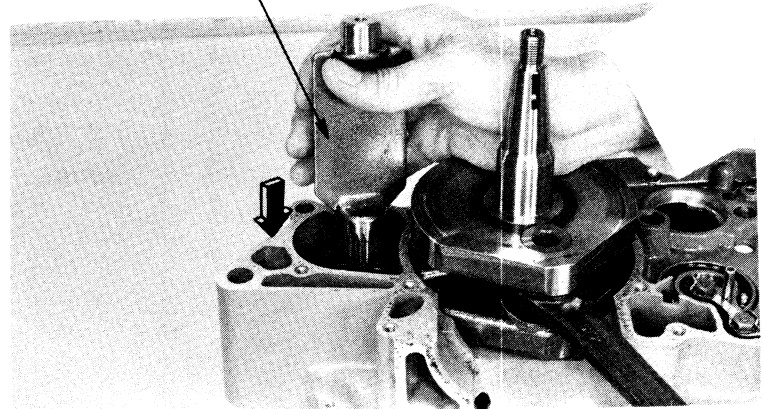


TRANSMISSION INSTALLATION

Install the gears on the mainshaft and countershaft. Apply clean transmission oil to the gears before installation.

NOTE

Make sure the gears rotate freely on the shafts.

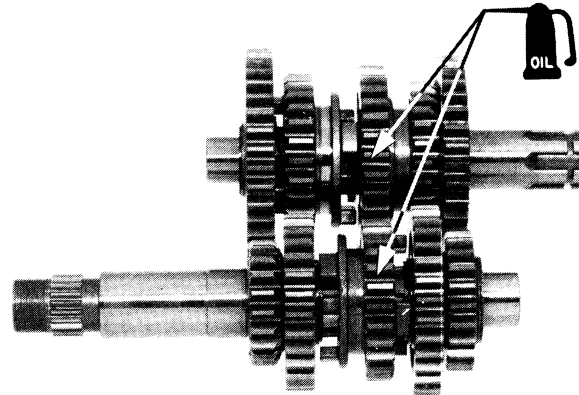

Install the countershaft and mainshaft in the left crankcase.

NOTE

Install the countershaft oil seal after the right and left crankcases have been assembled.

