




TIRE REMOVAL

Deflate the tire.
Break both tire beads loose.

NOTE

- Do not use tire irons to break the bead away from the rim flange; this could damage the rim seal and cause an air leak.
- If it is difficult to break the beads or if rust has formed on the rim, apply a soap and water solution or tire mounting lubricant to the rim periphery.

TIRE DISASSEMBLING TOOL
07772-0010000 or M987X-350-XXXXX

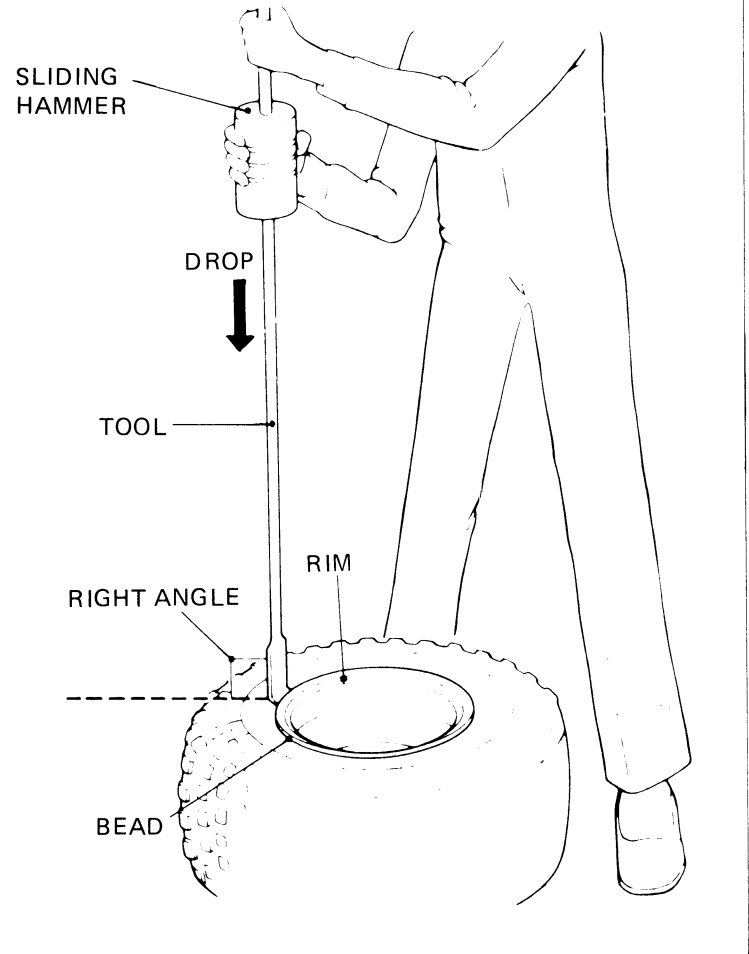

Remove the rim bolts.
Remove the rims, O-ring and rim plates.

Check the rim for damage.
Check the tire for cuts, tears, wear or other damage.
Replace if necessary.

