




FORK SPRING INSPECTION

Measure the free length of the fork springs.
Replace the springs if they are shorter than the service limit.


SERVICE LIMIT:

Spring A: 88.3 mm (3.48 in)

Spring B: 413.5 mm (16.28 in)

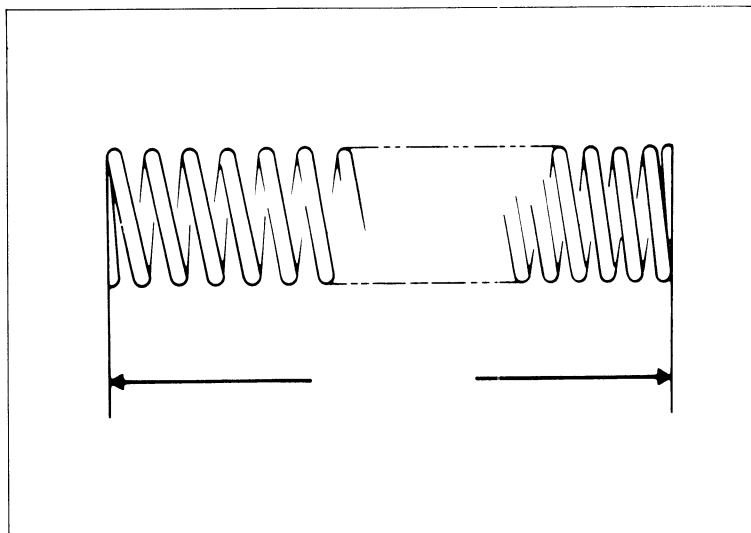

Remove the dust seal.

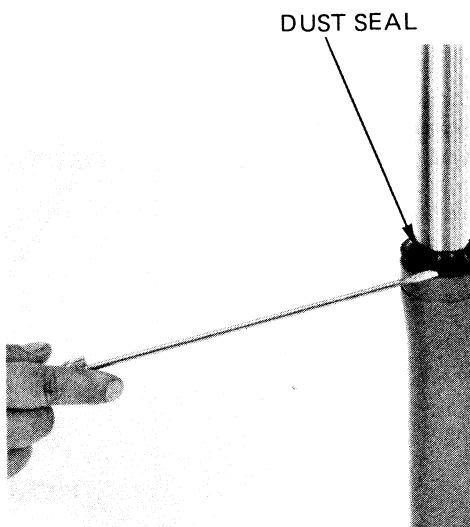

Remove the snap ring with the snap ring pliers.
Remove the back-up ring.
Remove the fork tube from the slider.

