


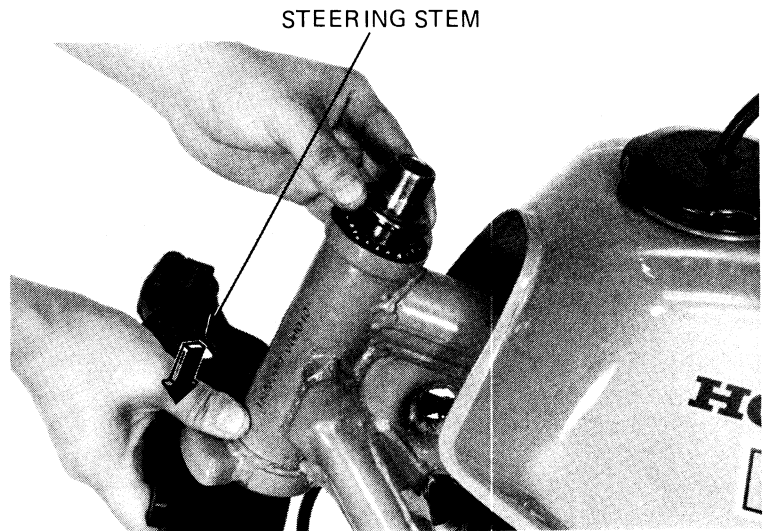

Remove the steering stem and bearings.

NOTE


Do not allow the steel balls to fall.



Check the top cone and ball races for wear or damage and replace if necessary.

NOTE

Replace the balls and races as a set when any component is damaged.

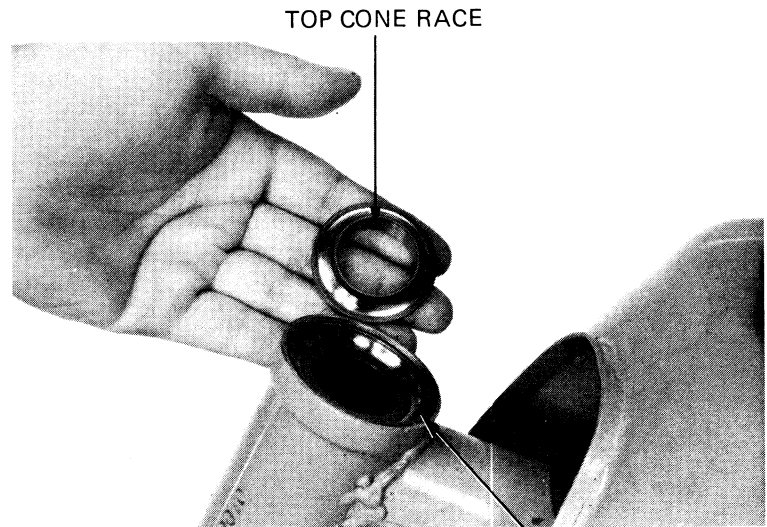

Remove the ball races.

