


BRAKE PANEL INSTALLATION

Pack all bearing cavities with grease.
Drive the wheel bearing squarely into the brake panel.
Press the oil seal onto the bearing.

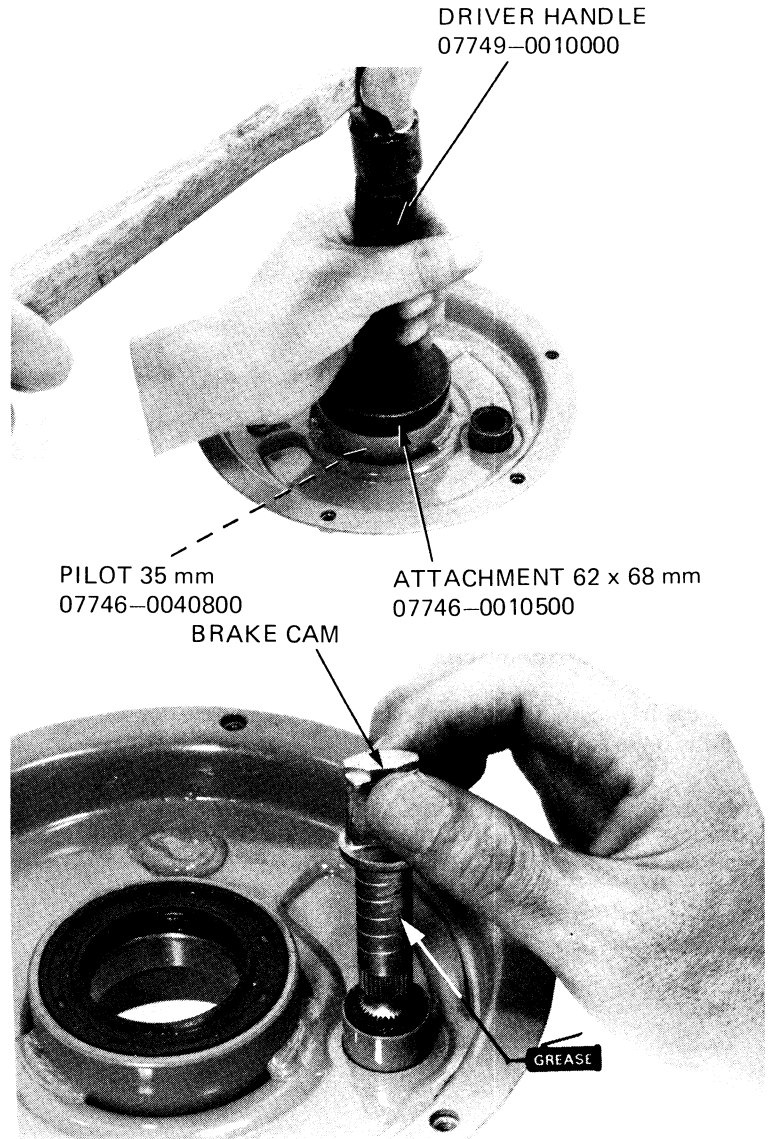

Lubricate the sliding surface of the brake cam with grease.
Install the brake cam in the brake panel.

Install the return spring.
Saturate the felt ring with engine oil and place it over the brake cam.
Install the wear indicator plate, noting the flat.

