



## SWINGARM

### REMOVAL

Remove the rear axle (Page 12-13).  
Remove the shock absorber lower bolt.

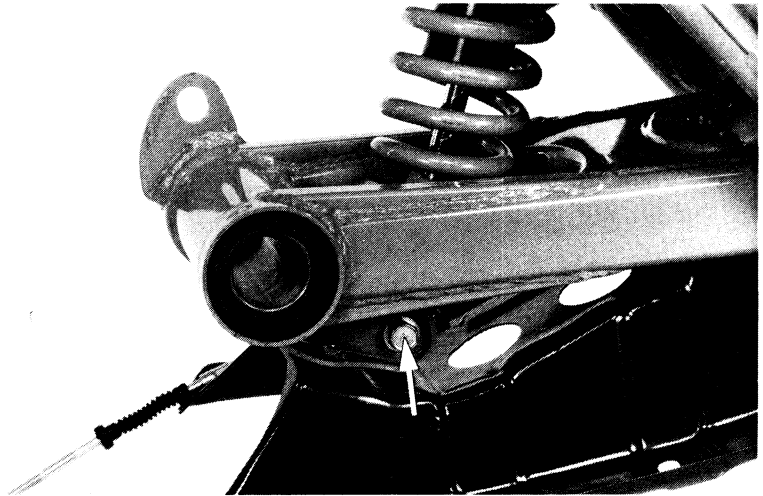

Remove the cotter pin.  
Remove the swingarm pivot nut and collar.  
Withdraw the pivot bolt and remove the swingarm.

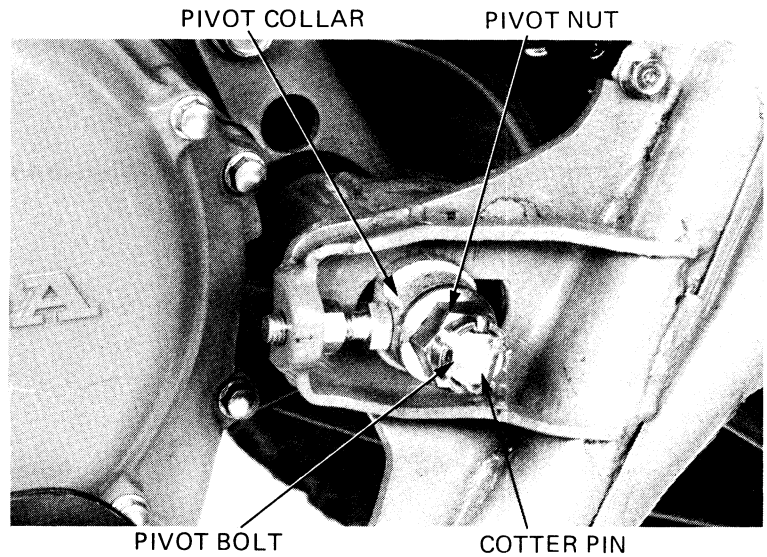

Remove the skid plate.

