



CDI UNIT

CDI UNIT REMOVAL


Disconnect the wire coupler.
Remove the CDI unit.

CDI UNIT INSPECTION

Replace the CDI unit if the readings are within the limits shown in the table.

NOTE

- The CDI unit is fully transistorized.
- For accurate testing, it is necessary to use a specified electric tester. Use of an improper tester may give a false reading.
- Use SANWA ELECTRIC TESTER (P/N 7308-0020000) or KOWA ELECTRIC TESTER (TH-5H).

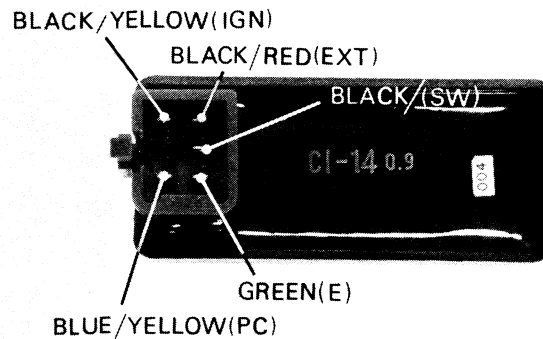

Measuring ranges:

SANWA [SP-10D type] : x kΩ

KOWA [TH-5H type] : x 100Ω

Unit: KΩ

(-)	(+)	BLACK	BLACK/RED	BLUE/YELLOW	GREEN	BLACK/YELLOW
BLACK			∞	∞	∞	∞
BLACK/RED		0.1 ~ 20		∞	∞	∞
BLUE/YELLOW		20 ~ 1000	5 ~ 500		1 ~ 100	∞
GREEN		1 ~ 100	0.1 ~ 20	1 ~ 100		∞
BLACK/YELLOW		∞	∞	∞	∞	