




## HEADLIGHT

### HEADLIGHT DISASSEMBLY

Remove the headlight (Page 10-3).  
Disassemble the headlight.

### HEADLIGHT ASSEMBLY

Assemble the headlight in the reverse order of disassembly.

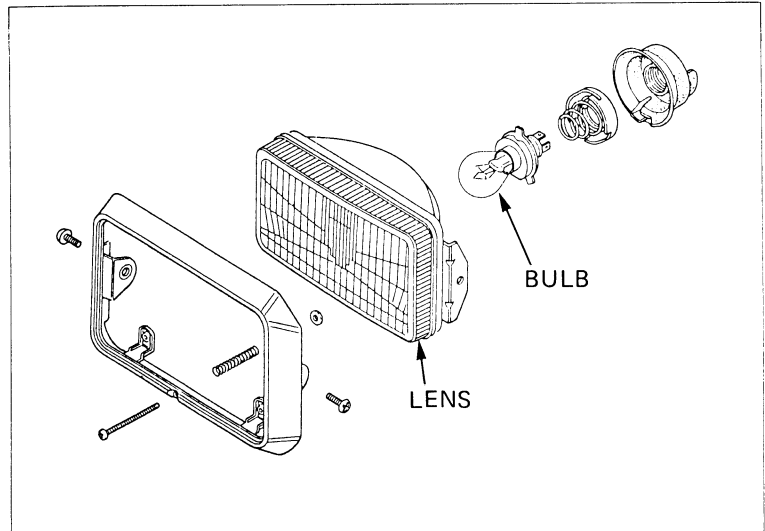

## TAILLIGHT

### TAILLIGHT DISASSEMBLY

Remove the lens screws.  
Remove the bulb.

### TAILLIGHT ASSEMBLY

Assemble the taillight in the reverse order of disassembly.

