




ADJUSTMENT

Loosen the lock nut on the rear caliper.


Screw in the adjusting bolt until you feel resistance without applying the clutch/parking brake lever, and tighten the lock nut.

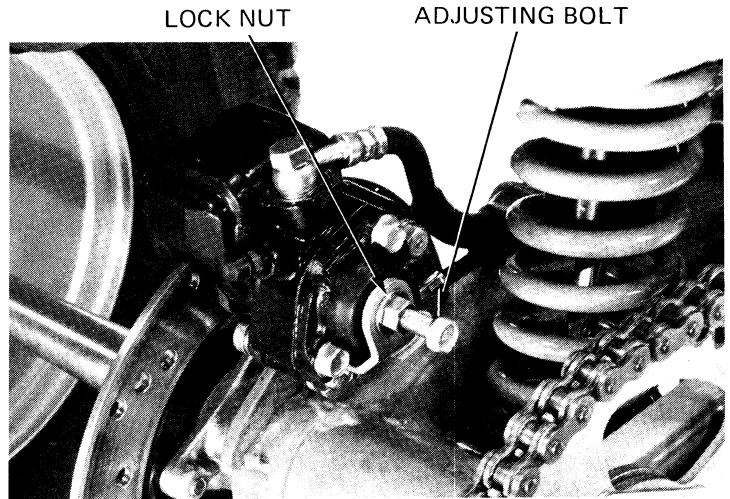

Press the parking brake arm button and pull in the clutch/parking brake lever.

Measure the distance the clutch/parking brake lever is moved.

The distance should be 30-40 mm (1 1/4-1 5/8 in) at the tip of the clutch/parking brake lever.

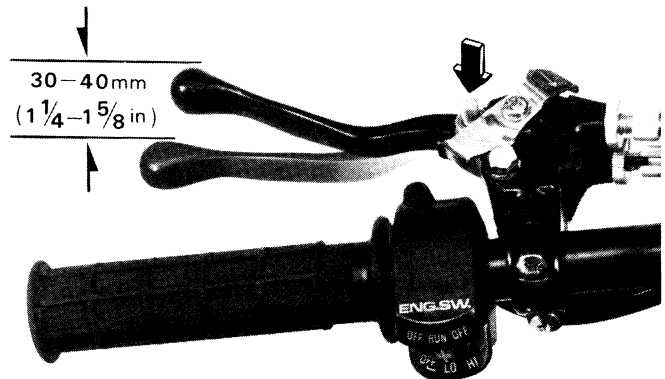

To adjust the distance, loosen the lock nut and turn the adjuster.

Tighten the lock nut.

