


BRAKE FLUID/ AIR BLEEDING

Check the fluid level with the fluid reservoir parallel to the ground. Refer to page 17-9.

CAUTION:

- Install the diaphragm on the reservoir when operating the brake pedal. Failure to do so will allow brake fluid to squirt out of the reservoir during brake operation.
- Avoid spilling fluid on painted surfaces.
- Do not mix different types of fluid in the reservoir. Mixing different types may not provide optimum braking performance.

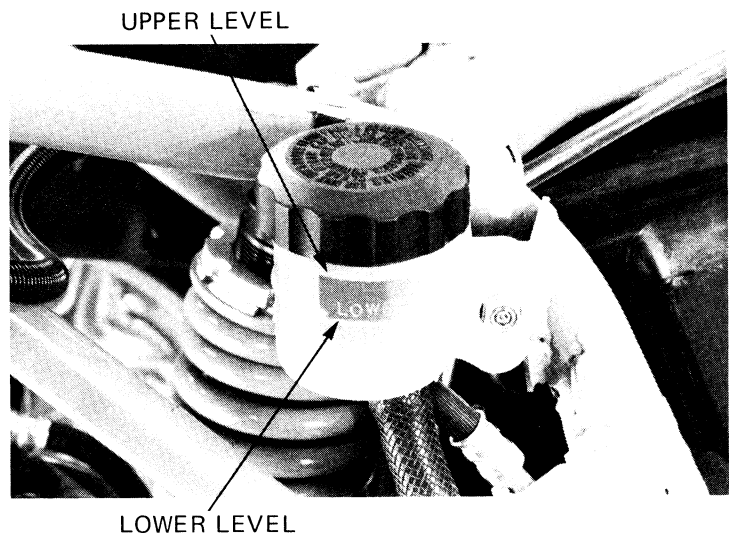

BRAKE FLUID DRAINING/FILLING

Connect a bleed hose to the bleeder valve.

Loosen the caliper bleeder valve and pump the brake pedal.

Stop operating the pedal when no fluid flows out of the bleeder valve.

WARNING

A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

Close the bleeder valve, fill the reservoir, and install the diaphragm.

Pump up the system pressure with the pedal until there are no air bubbles in the fluid flowing out of the reservoir small hole and pedal resistance is felt.

Fill the reservoir up to the UPPER FLUID LEVEL.

Check the entire system for leaks by operating the pedal.

