


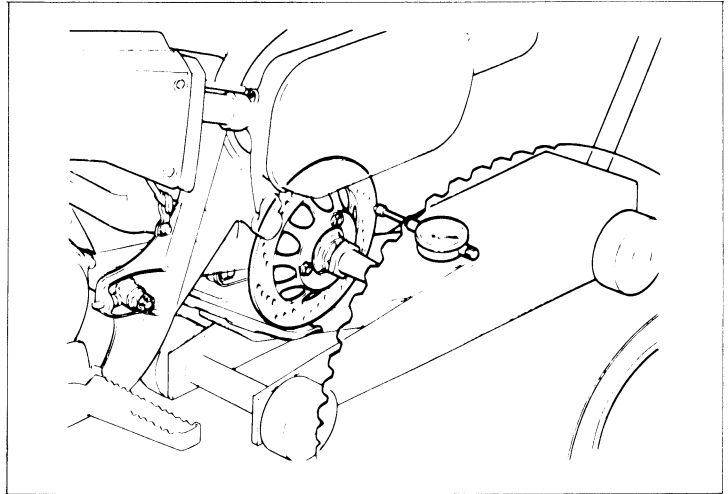

Measure the brake disc warpage.

SERVICE LIMIT: 0.30 mm (0.012 in)



BRAKE CALIPER

BRAKE CALIPER REMOVAL

Remove the brake caliper (page 17-15).


Remove the brake pads (page 17-15).

Operate the brake pedal to force the piston out from the cylinder.

NOTE

- Place an oil pan under the caliper to receive drained brake fluid.
- Avoid spilling brake fluid on painted surfaces or rubber parts.

Disconnect the brake hose from the caliper.

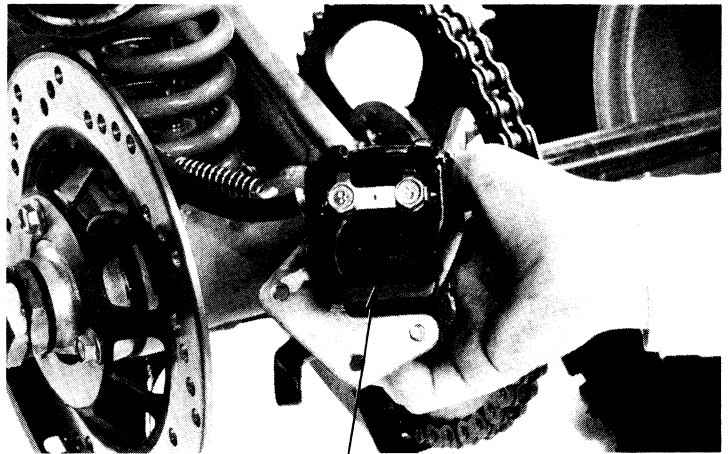

CALIPER PISTON

If the piston is stuck in the caliper, place a shop towel or rag over the piston to prevent the piston and brake fluid from coming out, and apply a small amount of air pressure to the fluid inlet.

WARNING

Do not use high pressure air or bring the nozzle too close to the inlet.

