




PARKING BRAKE REMOVAL


Remove the two bolts and parking brake assembly.

PARKING BRAKE ASSEMBLY

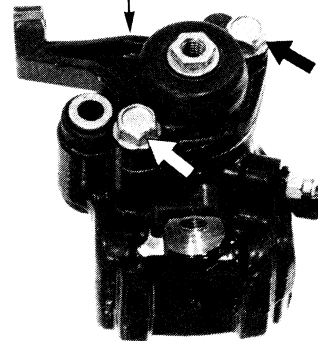

Remove the boot and parking brake shaft.

BOOT SHAFT

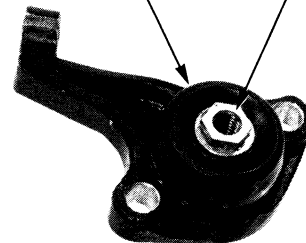

INSPECTION

Check the parking brake shaft for wear or damage.

